


Muffler

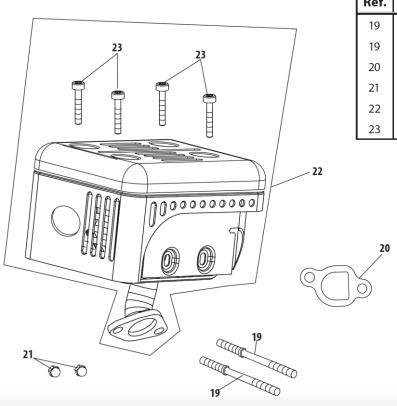

Air Cleaner

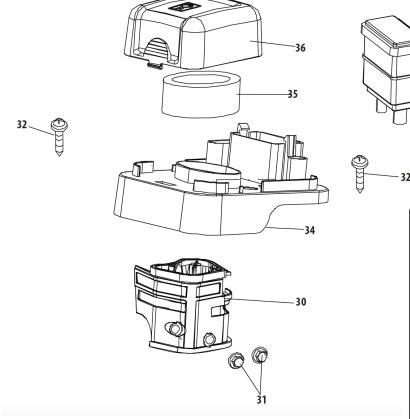


Ref.	Part Number	Description	
19	951-14063	Muffler Stud	
19	951-14141	Muffler Stud Assembly	
20	951-11289	Muffler Gasket	
21	712-04214	Nut, M8	
22	951-14067	Muffler Assembly	
23	710-05002	Bolt M5×10	

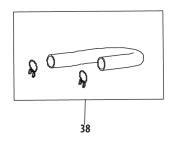

Ref.	Part Number	Description	
30	951-12157	Air Cleaner Housing	
31	712-04213	Nut	
32	951-14068	Self-Tapping Bolt M4.2×16	
34	951-14070	Silencer Plate	
35	951-10794	Air Cleaner Filter Assembly	
36	951-14071	Air Cleaner Cover	
37	951-14069	Carbon Canister	
38	951-14072	Hose Assembly	
38	951-14073	Clamp, Hose	


Carburetor Assembly

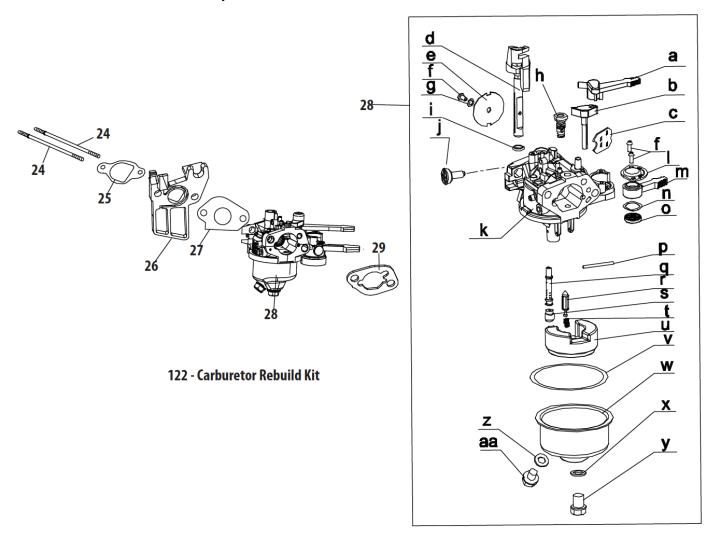


Ref.	Part Number	Description	
24	710-05101	Carburetor Stud Bolt	
25	951-11567	Carburetor Insulator Gasket	
26	951-11568	Carburetor Insulator	
27	951-11569A	Carburetor Gasket	
28	951-12552	Carburetor Assembly	
29	951-11571	Carburetor Gasket Plate	
122	951-12787	Carburetor Rebuild Kit	
		(Incl.h,p,q,r,s,t,u,v,x,z)	
a	951-11177	Control Lever,Choke	
b	n/a	Choke Shaft	
С	n/a	Choke Plate	
d	n/a	Throttle Shaft	
е	n/a	Throttle Plate	
f	710-05469	Fuel Shutoff Lever Screw	
g	736-04638	Choke Control Lever Washer	
h	n/a	Idle Jet Assembly	
i	n/a	Gasket, Throttle Plate	
j	n/a	Idle Speed Adjusting Screw	

Ref.	Part Number	Description	
k	n/a	Carburetor Body	
1	n/a	Fuel Shutoff Cover	
m	951-12812	Fuel Shutoff Lever	
n	736-04635	Fuel Shutoff Washer	
0	951-12793	Fuel Shutoff Valve	
р	n/a	Float Pin	
q	n/a	Emulsion Tube	
r	951-12875	Float Needle Valve	
S	n/a	Main Jet	
t	n/a	Needle Valve Spring	
u	n/a	Float	
V	951-11589	Fuel Bowl Gasket	
w	n/a	Fuel Bowl	
х	951-11348	Fuel Bowl Gasket	
у	710-04945	Fuel Bowl Mounting Bolt	
z	951-11349	Fuel Drain Plug Gasket	
aa	710-04938	Fuel Drain Plug	

Crankshaft & Crankcase

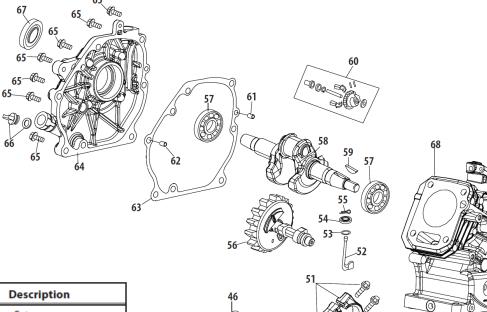


Ref.	Part Number	Description	
45	951-12111	Piston Ring Set	
46	951-11632	Piston Pin Snap Ring	
47	951-12007	Piston	
48	951-11633	Piston Pin	
49	710-04915	Bolt M6×12	
50	951-11113	Air Shield	
51	951-11573	Connecting Rod Assembly	
52	951-14053	Governor Arm	
53	736-04461	Washer - 5.2 X 1.9	
54	951-11902	Governor Seal	
55	714-04078	Cotter Pin	
56	951-11575	Camshaft Assembly	
57	951-11369	Radial Ball Bearing, 6205	
58	951-14143	Crankshaft Kit	
		(Incl.57-59,67 & 70)	
59	951-10307	Woodruff Key	
60	951-11576	Governor Gear/Shaft Assembly	
61	715-04092	Dowel Pin 7×14	
62	715-04096	Dowel Pin 9×14	
63	951-11371	Crankcase Cover Gasket	
64	951-12125	Crankcase Cover	
	951-14142	Crankcase Cover Kit	
		(Incl.57,63-66, & 70)	
65	710-04932	Bolt M8×32	
66	951-11283	Oil Fill Plug Assembly	
66	951-11577	O-Ring	
67	951-12126	Oil Seal	
68	951-14144	Crankcase Service Kit	
		(Incl.54,57,67-70)	
	951-12551	Short Block Assembly	
		(Incl.4,20,25-27,39,42,	
		45-48,51-70)	
69	951-12514	Oil Drain Plug	
70	951-11578	Oil Seal	
119	951-12572	Gasket Kit-Complete	
		(Incl.4,20,25-27,29,39,	
		53,56,63,67,70)	
120	951-12026A	Gasket Kit-External	
455	0507475	(Incl.4,20,52-27,29)	
121	952Z170-LU	U Complete Engine	

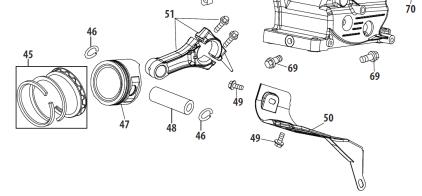

- 119 Gasket Kit-Complete
- 120 Gasket Kit-External
- 121 Complete Engine


Tank & Mounting

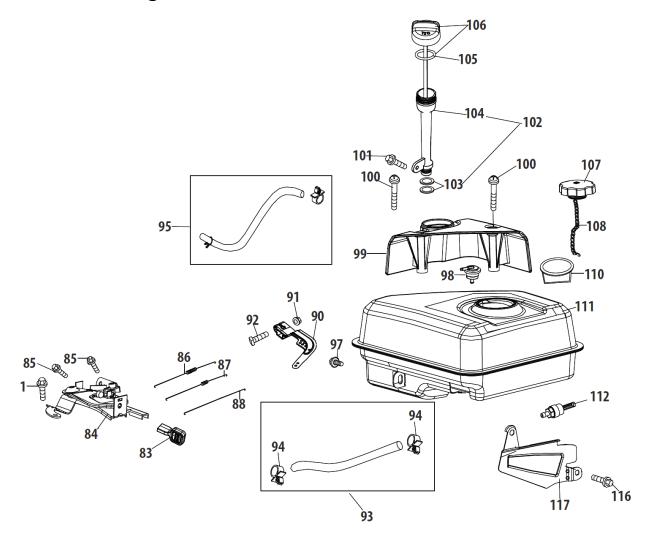

Ref.	Part Number	Description	
1	710-04968	Bolt M6×16	
83	951-11067	Throttle Control Knob	
84	951-12131	Primer Bracket	
85	710-05103	Bolt M6×12	
86	951-11585	Governor Spring	
87	951-10664	Throttle Linkage Spring	
88	951-10665	Throttle Linkage	
90	951-11106	Governor Arm	
91	712-04212	Nut M6	
92	710-04908	Governor Arm Bolt	
93	951-14260	Fuel Line Kit	
94	951-11700	Fuel Hose Clamp	
95	951-14133	Evap Hose Assembly	
97	710-04915	Bolt M6×12	
98	951-14075	Roll Over Valve	

	Ref.	Part Number	Description	
	99	951-11914	Engine Dipstick Cover	
ı	100	710-04905	Screw	
ı	101	710-04915	Bolt M6×12	
	102	951-11913	Oil Fill Tube Assembly	
	103	951-11381	Fill Tube O-Ring	
	104	951-10656	Dipstick Tube	
	105	951-11904	Dipstick O-Ring	
	106	951-12482	Dipstick Assy	
	107	951-12535	Fuel Cap Assembly	
	108	951-14076	Fuel Cap Chain	
	110	751-14265	Fuel Level Indicator	
	111	951-14077	Fuel Tank	
	112	951-10651	Fuel Tank Nipple	
	116	710-04940	Bolt M6×10	
	117	951-11110	Air Flow Shield	


TB27LS 170-LU パーツリスト Fly wheel

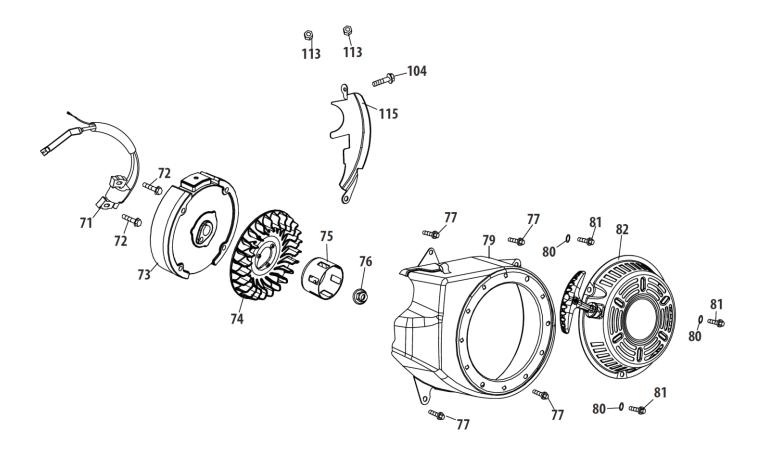

Ref.	Part Number	Description	
71	951-10792	Ignition Coil	
72	710-04919	Flange Bolt M6X25	
73	951-10805	Flywheel	
74	951-10934	Cooling Fan	
75	951-10911	Starter Cup	
76	712-04209	Nut M14	
77	710-04915	Bolt:M6X12 Zinc	

Ref.	Part Number	Description	
79	951-11583	Blower Housing	
80	736-04455	Flat Washer	
81	710-04974	Flange Bolt	
82	951-12418	Recoil Starter Assembly	
113	712-05015	Nut, M6	
114	710-04918	Bolt M6×20	
115	951-14138	Blower Housing Shield	

Cylinder Head

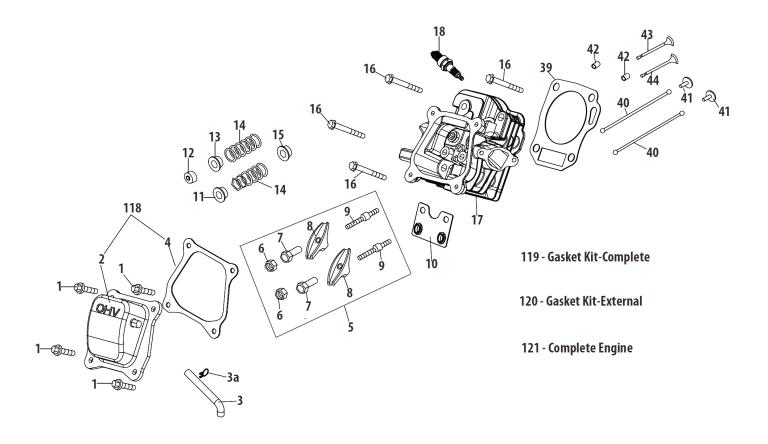

Ref.	Part Number	Description	Ref.	Part Number	Description
1	710-04968	Bolt M6×16	17	951-10722B	Cylinder Head Kit
2	951-11054A	Valve Cover			(Incl.4-15,17,20,25,27,39,43,44)
3	731-07059	Breather Hose	18	951-10292	Spark Plug/F6Rtc
3a	726-04101	Breather Hose Clamp	39	951-11572	Cylinder Head Gasket
4	951-11565	Valve Cover Gasket	40	951-10648	Push Rod Kit
5	951-11892	Rocker Arm Assembly	41	951-11899	Tappet
6	751-11124	Nut, Pivot Locking	42	715-04108	Dowel Pin 10X16
7	751-11123	Adjusting Nut, Valve	43	951-10647A	Valve Kit
8	951-11893	Rocker Arm	44	951-10647A	Valve Kit
9	710-04902	Bolt, Pivot	118	951-12626	Valve Cover Kit
10	951-11895	Push Rod Guide	119	951-12572	Gasket Kit-Complete
11	951-12000	Valve Spring Retainer (Intake)			(Incl.4,20,25-27,29,39,
12	951-12002	Exhaust Valve Adjuster			53,56,63,67,70)
13	951-12003	Valve Spring Retainer (Exhaust)	120	951-12026A	Gasket Kit-External
14	951-12004	Valve Spring			(Incl.4,20,52-27,29)
15	951-11894	Valve Seal (Intake)	121	952Z170-LU	Complete Engine
16	710-04933	Bolt M8×55			
17	951-10722B	Cylinder Head Kit			