


MTD 乗用芝刈機 PONY N77KS

K Style Hood

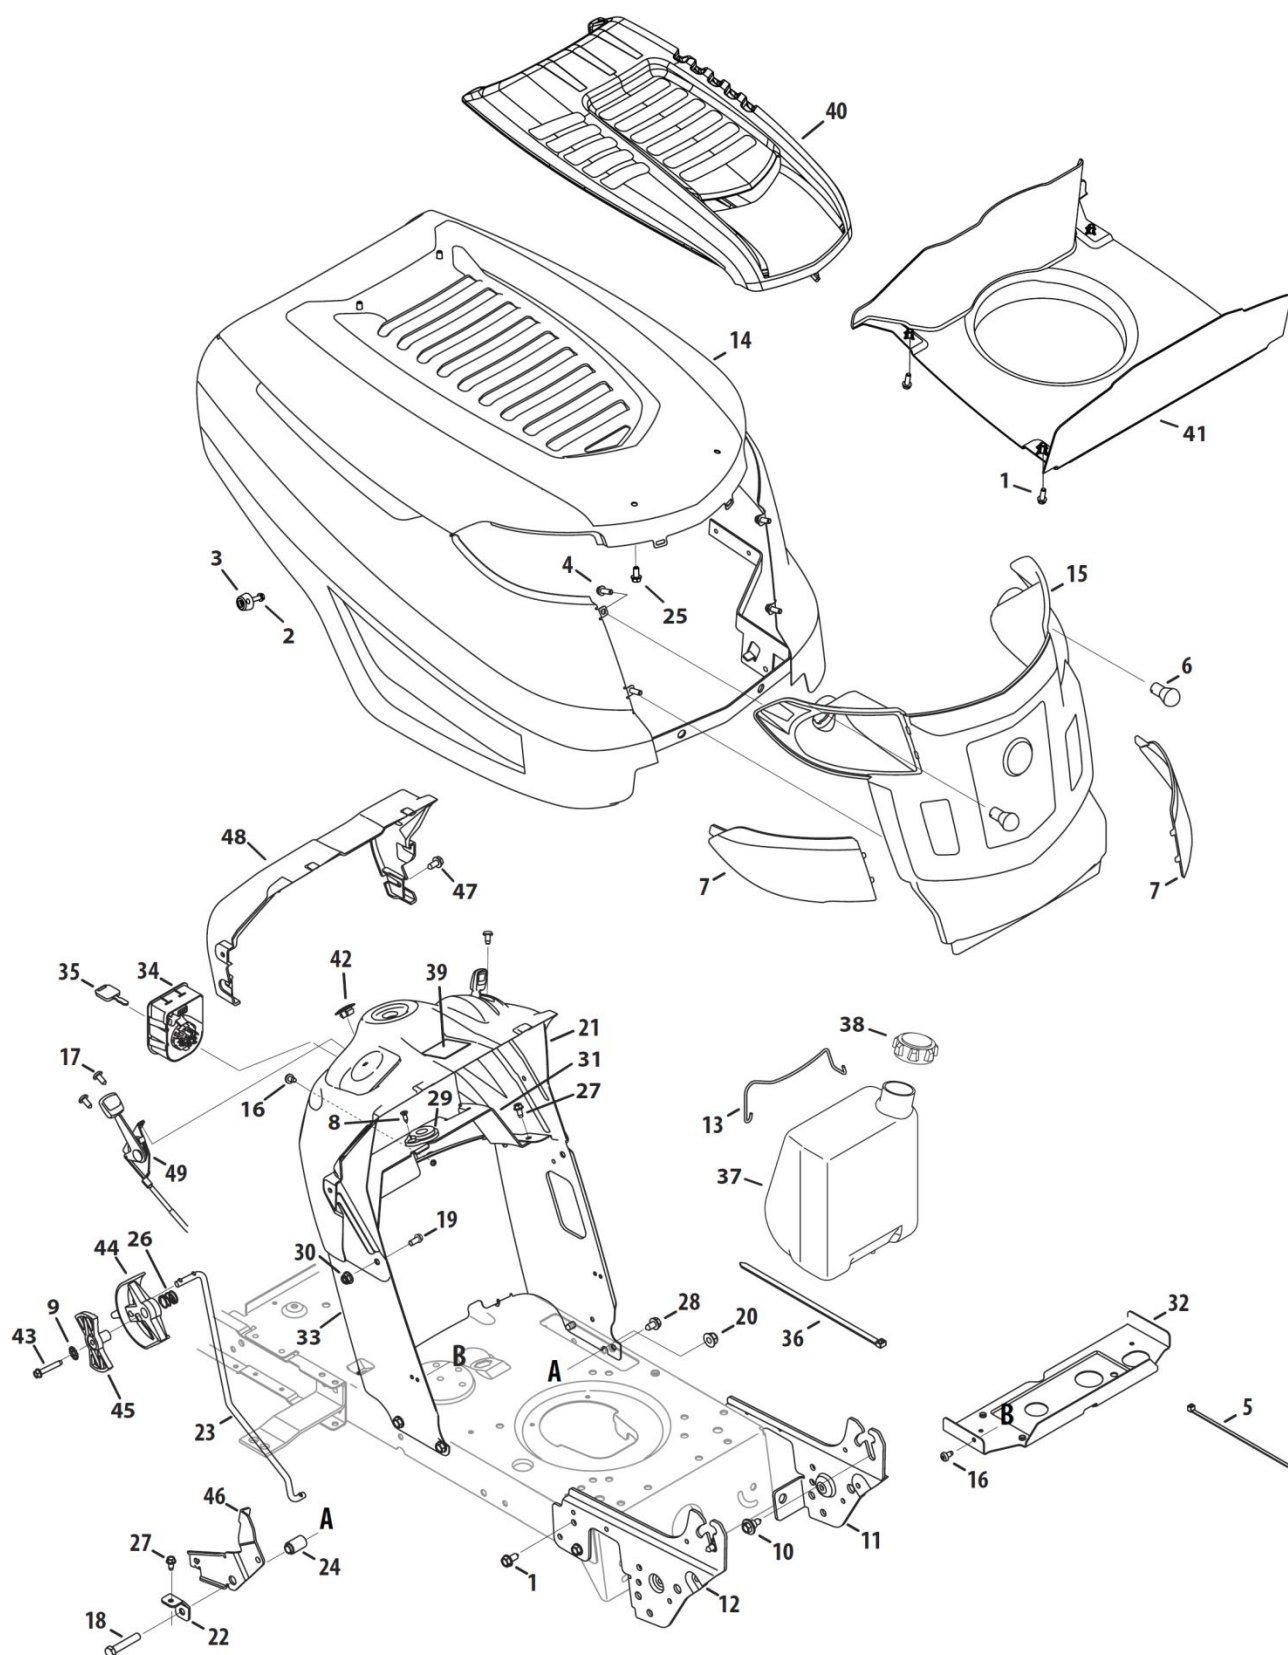


K Style Hood

Ref. No.	Part No.	Description
1	710-04484	Screw 5/16-18 x .750
2	710-05281	Screw, #12-16 x 1.25
3	731-06404	K-Style Bumper
4	710-05108	Screw, 1/4 x .750
5	725-0157	Cable Tie
6	925-0963	Miniature lamp 12V socket
7	731-06095	Grill Lens - LH
	731-06096	Grill Lens - RH
8	910-0224	Screw, #10-16 x .500
9	736-3006	Lock Washer, 1/4
10	738-04091A	Shoulder Screw .43 x .29
11	783-05327B	Support Bracket LH
12	783-05328A	Support Bracket RH
13	683-04448	Battery Rod
14	683-04774	Hood, w/ Scoop
	683-04441A	Hood
15	931-06796A	Grille Assembly, K-Style
	631-04272	Grill Assembly, TB
16	710-05070A	Screw, 1/4-20 x .500
17	710-04483	Screw 1/4-20 x .500
18	710-3144	Hex Screw 3/8-16 x 2.00
19	710-3025	Hex Screw, 5/16-18 x .625
20	712-04065	Flange Lock Nut 3/8-16
21	931-09942A	Dash, Upper, RMC, NAMM
	931-09344A	Dash, Upper, NRMC
	931-07770A	Dash, Upper, w/ RMC
22	783-06823	Speed Latch Tab
23	747-05398	Speed Control Rod
24	750-04465C	Flange Spacer .39 x .671 x 1.095
25	710-04187A	Screw, 1/4-15 x 0.50
26	732-04877	Compr. Spring, .72 OD x .78

Ref. No.	Part No.	Description
27	710-1652	Tap Screw, 1/4-20, 0.625
28	710-0604A	Screw 5/16-18 x .625
29	741-0587	Bearing, .628 ID x 1.36
30	712-04063	Flange lock Nut 5/16-18
31	783-06785C	Bracket, Steering Support
32	783-07083	Gas Tank Support Bracket
33	783-06811D	Dash, Lower NWNDW
34	925-06119B	Key Switch Module
	925-1741	4 Position Key Switch
35	925-1745A	Key
36	726-0230	Cable Tie
37	751-0555B	Fuel Tank, 1.5 Gallons
38	751-0603A	Fuel Cap, 1.5 Gallon
39	925-06170	Hour Meter
40	731-06194B	Hood Scoop
41	931-09328	Plenum
42	731-05265	Choke Plug
43	710-05237	Hex Washer Screw, 1/4-20 x 1.50
44	731-07885B	Shift Lever
45	731-07895A	Index Control, 7 SPD
	731-07966A	Index Control, Park
46	683-04766	Speed Latch - RMC
	783-06991	Transmission Speed Latch
47	710-0895	Screw, 1/4-15 x .750
48	731-05078C	Dash Collar
49	946-04622	Throttle/Choke Cable, 39"
	746-04367	Throttle/Choke Cable, 28"
—	925-04432H	Harness, LT-5, RMC, Dual
—	925-05320B	Harness, LT-5, NRMC
—	925-06314	Harness, LT-5, RMC, HM


Frame and PTO Lift

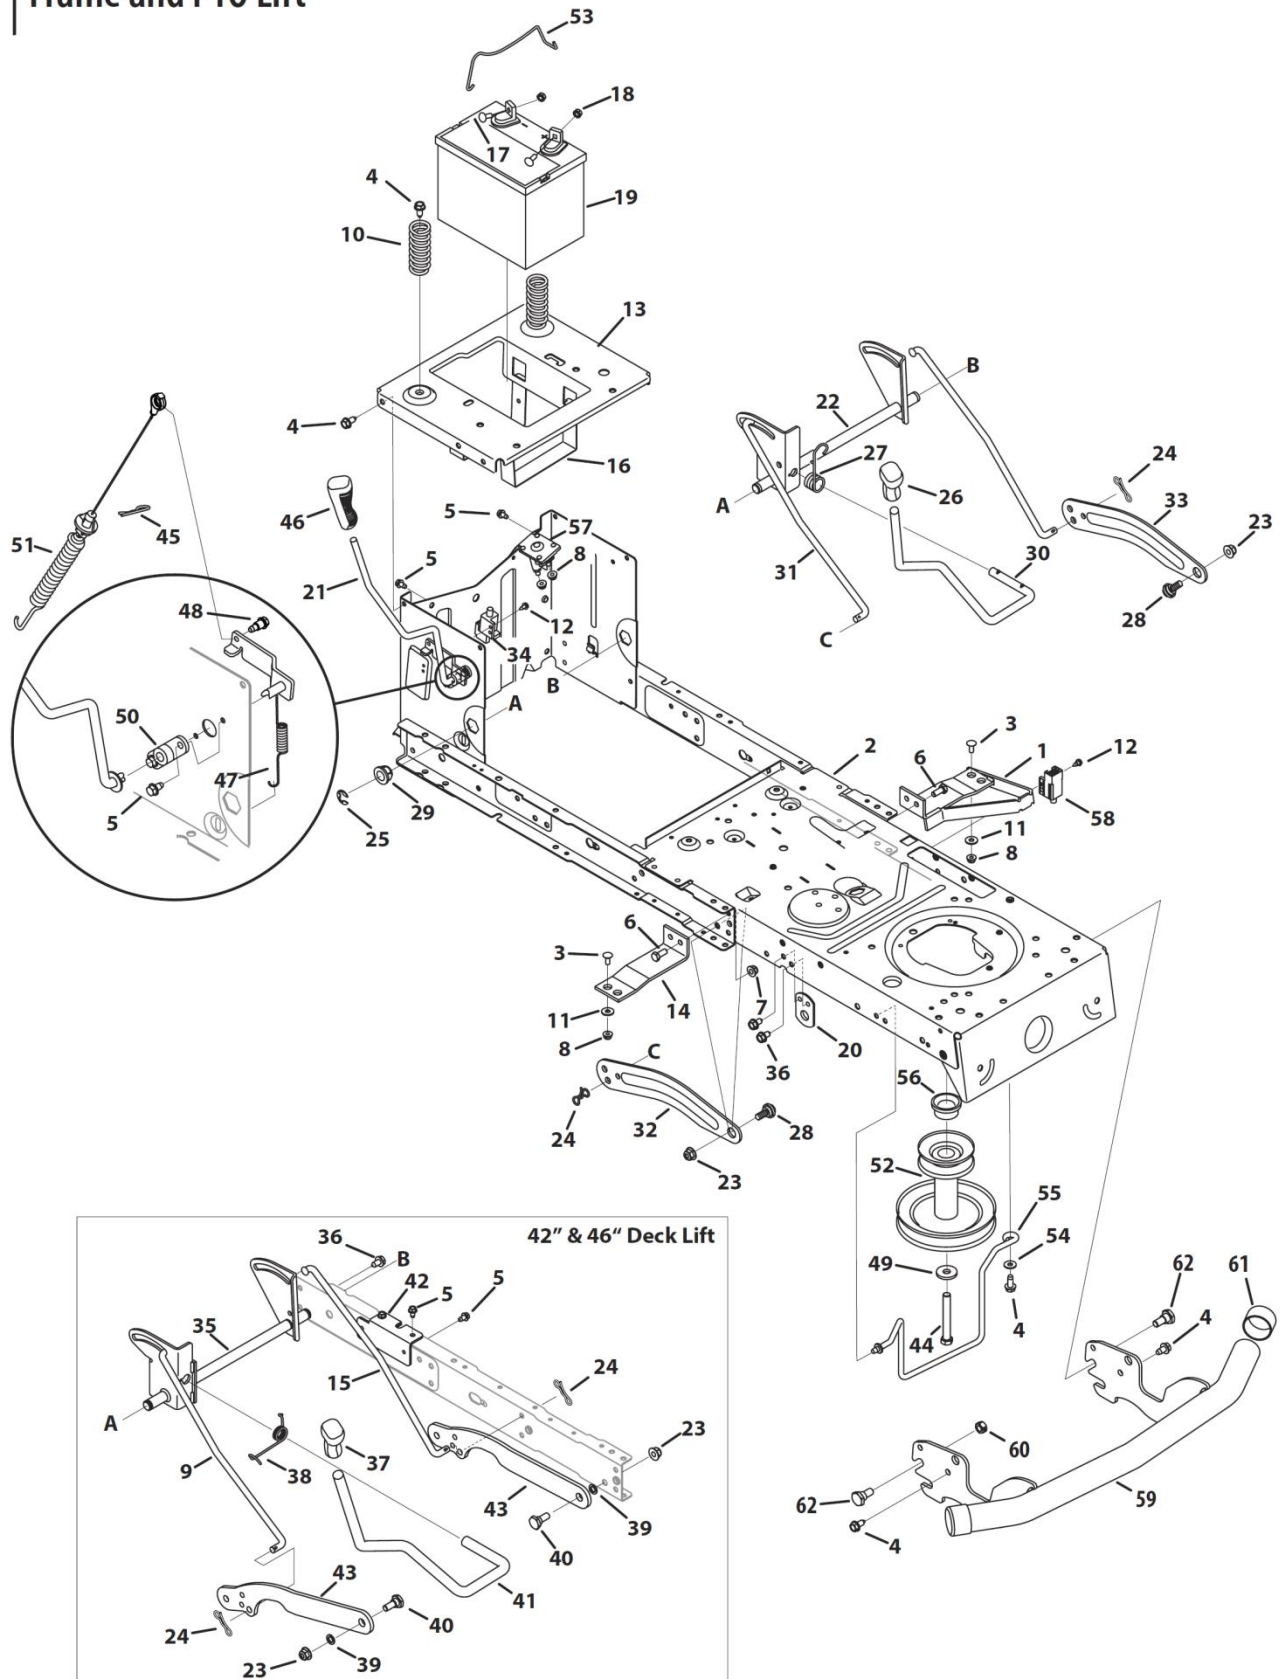

Frame and PTO Lift

Ref.	Part Number	Description
1	683-04195	Support Bracket
2	683-05139	Frame Assembly
3	710-0703	Screw Carriage, 1/4-20 x .75
4	710-04484	Screw 5/16-18 x .750
5	710-0599	Screw, 1/4-20 x .500
6	710-3008	Hex Screw, 5/16-18 x .75
7	712-04063	Flangelock Nut, 5/16-18
8	712-04064	Flangelock Nut, 1/4-20
9	747-06237A	Lift Rod, RH
10	732-0735A	Compression Spacer, 1.314 x 2.55
11	736-0173	Flat Washer, .28 x .74 x .063
12	738-04237A	Shoulder Spacer, 10-32 x .500
13	783-04548D	Seat Frame Bracket
14	783-04637	Running Board Bracket
15	747-06253	Lift Rod, LH
16	783-04869A	Battery Bracket
17	710-04666	Hex Head Flange, 1/4-20 x .75
18	712-0271	Sems Nut, 1/4-20
19	925-1707D	230 CCA Battery
20	783-04536B	Support Bracket
21	647-05041	PTO Handle Assembly
22	683-04155A	Lift Assembly, 38
23	712-04065	Flangelock Nut, 3/8-16
24	714-04040	Bow-tie Cotter Pin
25	716-0106A	E Ring
26	720-0311	Handle Grip, 1/2
27	732-04225	Torsion Spring
28	738-04130A	Shoulder Bolt, 3/8-16 x .625 x .175
29	941-0225	Hex Flange Bearing
30	747-04282	Deck Lift Handle 38"
31	747-04393	Lift Rod
32	783-04494C	38" Lift Arm, RH
33	783-04711C	38" Lift Arm, LH

Ref.	Part Number	Description
34	725-04363	Switch Interlock
35	683-04334	Lift Assembly, 46"
36	710-0604A	Screw, 5/16-18 x .625
37	720-0298	Handle Grip, 5/8
38	732-04438	Torsion Spring Handle, 46"
39	936-0140	Flat Washer, .385 x .62 x .063
40	938-0380	Shoulder Bolt, 3/8-16 x .500 x .270
41	747-04653A	46" Lift Handle
42	783-05389A	Frame Brace Bracket
43	783-0678C	Lift Deck Link
44	710-3157A	Hex Screw, 7/16-20 x 3.25
45	914-0145	Click Pin, .092 x 1.64
46	720-04049A	Handle Grip, 3/8
47	732-05376	PTO Spring Extension
48	738-04425	Shoulder Bolt, 1/4-28 x .342 x .335
49	736-0322	Flat Washer, .450 x 1.250 x .164
50	741-04119A	PTO Bearing
51	946-05140	Deck Engage Cable (38")
	946-05124A	Deck Engage Cable (42" & 46")
52	756-04196A	Engine Pulley, 3.39 x 6.12
	956-04067A	Engine Pulley, 3.56 x 6.12
53	683-04448	Battery Hold Down Rod
54	936-0300	Flat Washer, .406 x .875 x .059
55	747-04332A	38" Belt Keeper
	747-04857	42" Belt Keeper
	683-04414	46" Belt Keeper
56	750-0956	Spacer, 1.010 x 1.400 x .825
57	725-06153	12V Solenoid
58	925-04039	Screw Mount Interlock Switch
59	683-04219B	Bumper Assembly, Universal
60	912-3000	Nut, 3/8-16, Centerlock
61	731-05674	Cap, Bumper
62	738-0143	Bolt, Shoulder, .496 x .336, 3/8-16

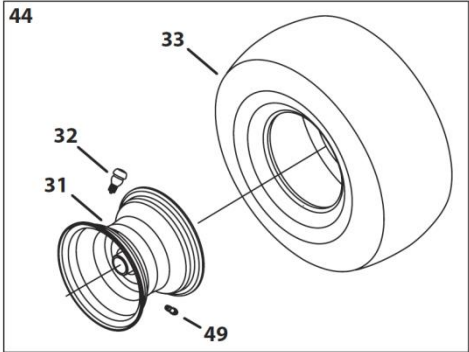


Front End Steering

Ref.	Part Number	Description
1	617-04094	Front Steering Gear Assembly
2	710-0514	Hex Screw, 3/8-16 x 1.00
3	710-0643	Hex Screw, 5/16-18 x 1.00, Lock
4	710-1309	Machine Screw, 5/16-18 x .750
5	710-3180	Hex Screw, 5/16-18 x 1.75
6	912-0240	Jam Nut, 7/16-20
7	912-0214	Jamlock Nut, 3/8-24
8	712-04063	Flangelock Nut, 5/16-18
9	638-04008P	Front RH Axle
	938-04013	46" Front RH Axle
10	923-0448A	Ball Joint, 7/16-20
11	736-0242	Bell Washer, .340 x .872 x .060
12	938-04007A	Front LH Axle
	938-04014A	46" Front LH Axle
13	738-04141	Shoulder Bolt, 5/16-18 x .435 x .350
14	938-05078	Steering Shaft, 5/8
15	941-04124	Flange Bearing, 5/8
16	931-0484A	Hub Cap
17	747-05385A	Steering Link
18	948-0389	Cap, 1.25 x .16
19	748-04278	Steering Block
20	748-04068	Spacer, .71 x .125 x .56
21	731-04039	Cap
	731-04040	Sprig Cap
	731-04681	Cap, Troy-Bilt
22	783-08577A	Stabilizer Plate
23	736-04228A	Flat Washer, .781 x 1.590
24	783-04568	Front Deck Hanger Bracket
25	714-0162	Cotter Pin, 5/32 x 1.25
26	710-04484	Screw, 5/16-18 x .750


Ref.	Part Number	Description
27	712-04065	Flangelock Nut, 3/8-16
28	914-0474	Cotter Pin, .125 x .75
29	919-04177C	Pivot Axle, Cast
30	631-04028	Steering Wheel
	631-04560A	Steering Wheel Soft Grip
	631-04008B	Wheel, Steering, 3 Spoke, Softgrip
31	634-05066	Rim Asm, 6.0 x 4.5
	934-04091A	Rim Asm, 6.0 x 4.5
32	934-0255	Valve, tubeless Air
33	734-1731	Tire, 15 X 6 X 6 Sq Shldr
	734-04240A-0901	Tire, 15 X 6 X 6 Rd Shldr
34	738-04128	Shoulder Bolt, 3/8-16 x .500 x 2.38
35	747-04299A	Fixed Rod
36	783-05326B	Pivot Bar Bracket
	783-04601C	Pivot Bar Bracket
37	726-0341	Push Cap, 3/4
38	731-04057A	Standard Axle Cap
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	726-04035	Push Nut, 3/4
41	731-04693	Hub Cap
42	936-0316	Flat Washer, .78 x 1.59 x .060
43	748-04068	Spacer, .71 x .125 x .56
44	634-05067	Wheel Assembly, Sq. Tred
	634-04341	Wheel Assembly
	634-05053	Wheel Assembly, Round Tred
45	683-0128B	Pivot Axle
46	912-0431	Flangelock Nut, 3/8-16
47	736-0331	Bell Washer, .390 x 1.13 x .062
48	750-06192A	Spacer, .38 ID x .854 OD x .22
49	737-0224	Grease Fitting

Seat and Fender

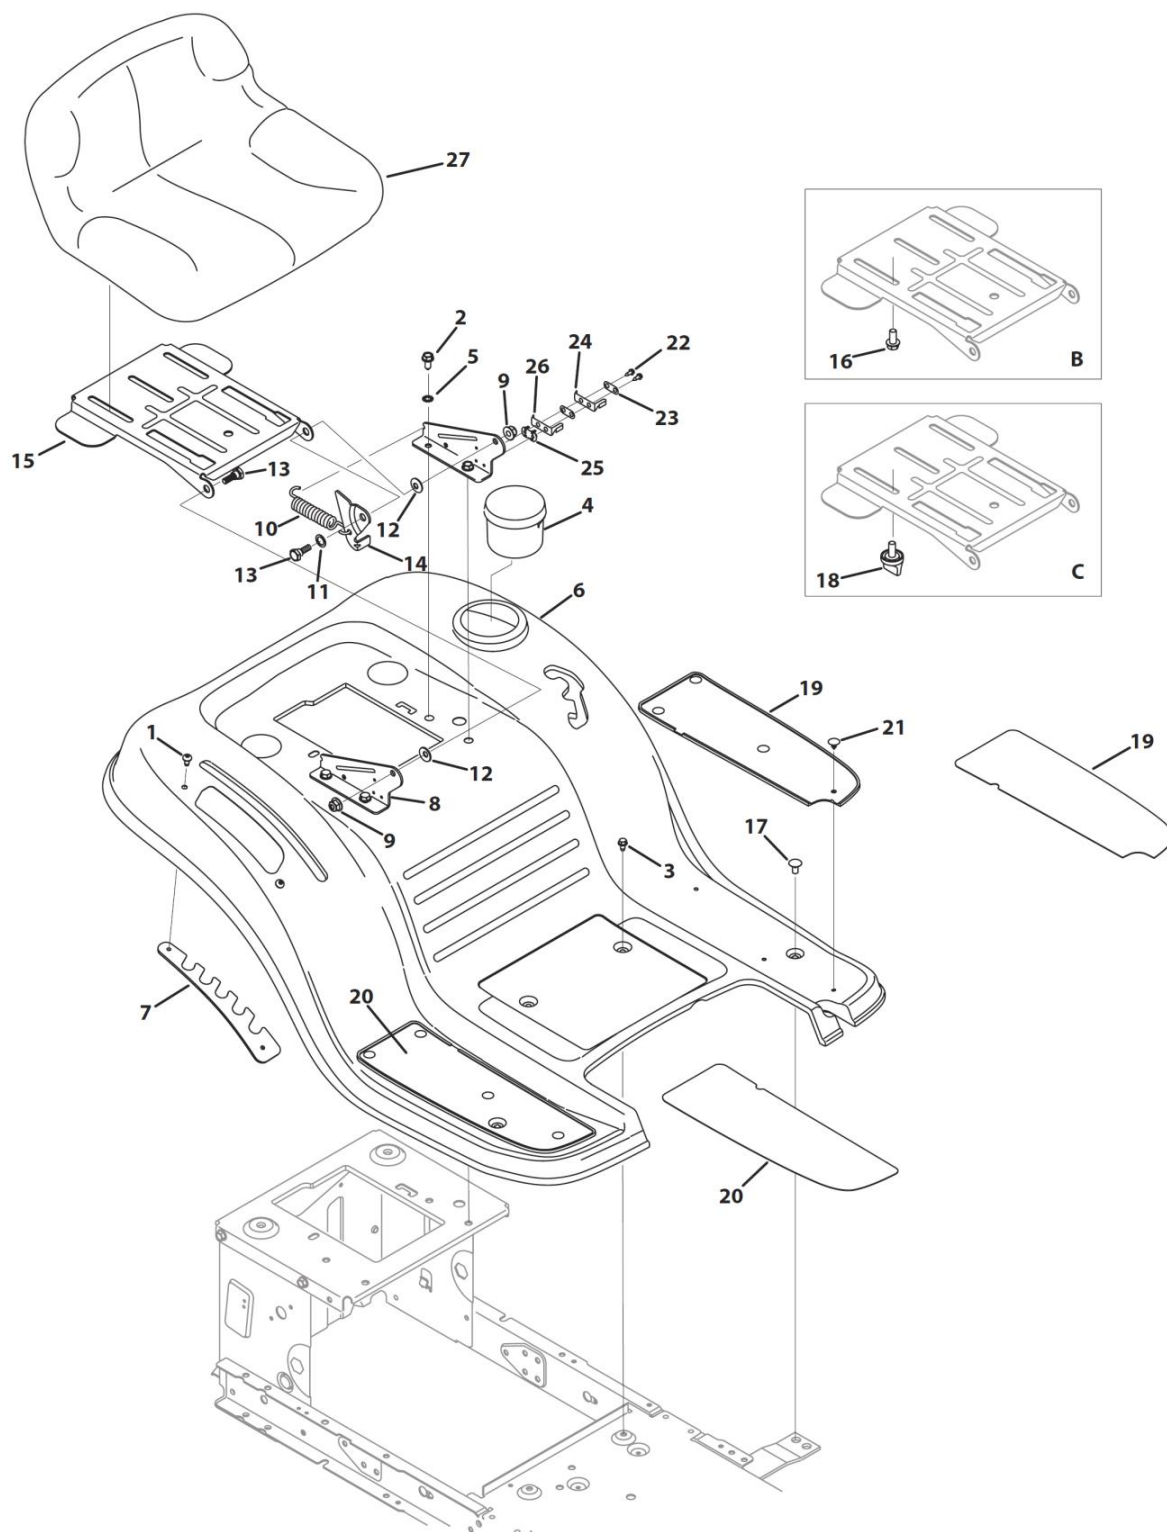


Ref.	Part Number	Description
1	710-05070A	Screw, 1/4-20 x .500
2	710-04484	Screw, 5/16-18 x .750
3	710-0599	Screw Pan Torx Head, 1/4-20 x .500
4	731-04591A	Cup Holder
5	736-0607	Loack Washer, 5/16
6	783-04587D	Fender (Single Speed)
	783-04593E	Fender (Hydro)
7	783-04843	Lift Adjuster Bracket
8	783-1489D	Seat Mount Bracket
9	712-04063	Flangelock Nut, 5/16-18
10	732-1184	Extension Spring
11	936-0108	Flat Washer, .510x .750 x .033
12	736-0242	Bell Washer, .340 x .872 x .060
13	938-0296	Shoulder Screw, 5/16-18 x .437 x .268
14	783-0209D	Lift Seat Bracket
15	783-04081D	Pivot Seat Manual Adjust Bracket
16	710-04482	Hex Head Flange, 3/8-16 x .875
17	710-0134	Screw Carriage, 1/4-20 x .62
18	720-04061	Knob, 3/8-16 x .875
19	735-04047	Foot Pad, LH
	723-04026	Foot Pad, Abrasive, LH
20	735-04048	Foot Pad, RH
	723-04025	Foot Pad, Abrasive, RH
21	726-3046	Ratchet Clip, .250 x .500
22	710-0227	Screw, 8-18 x .500
23	726-0279	Insulator Plate
24	925-1303	Outer Seat SPring
25	726-0278	Insulator Boss Plate
26	725-1439	Inner Seat Spring
27	757-04083A	Medium Back Seat, Black, Set-up B
	757-04099	Low Back Seat, Black, Set-up B
	757-04088A	High Back Seat, Set-up B or C

Transmission (Single Speed-Hand Control)

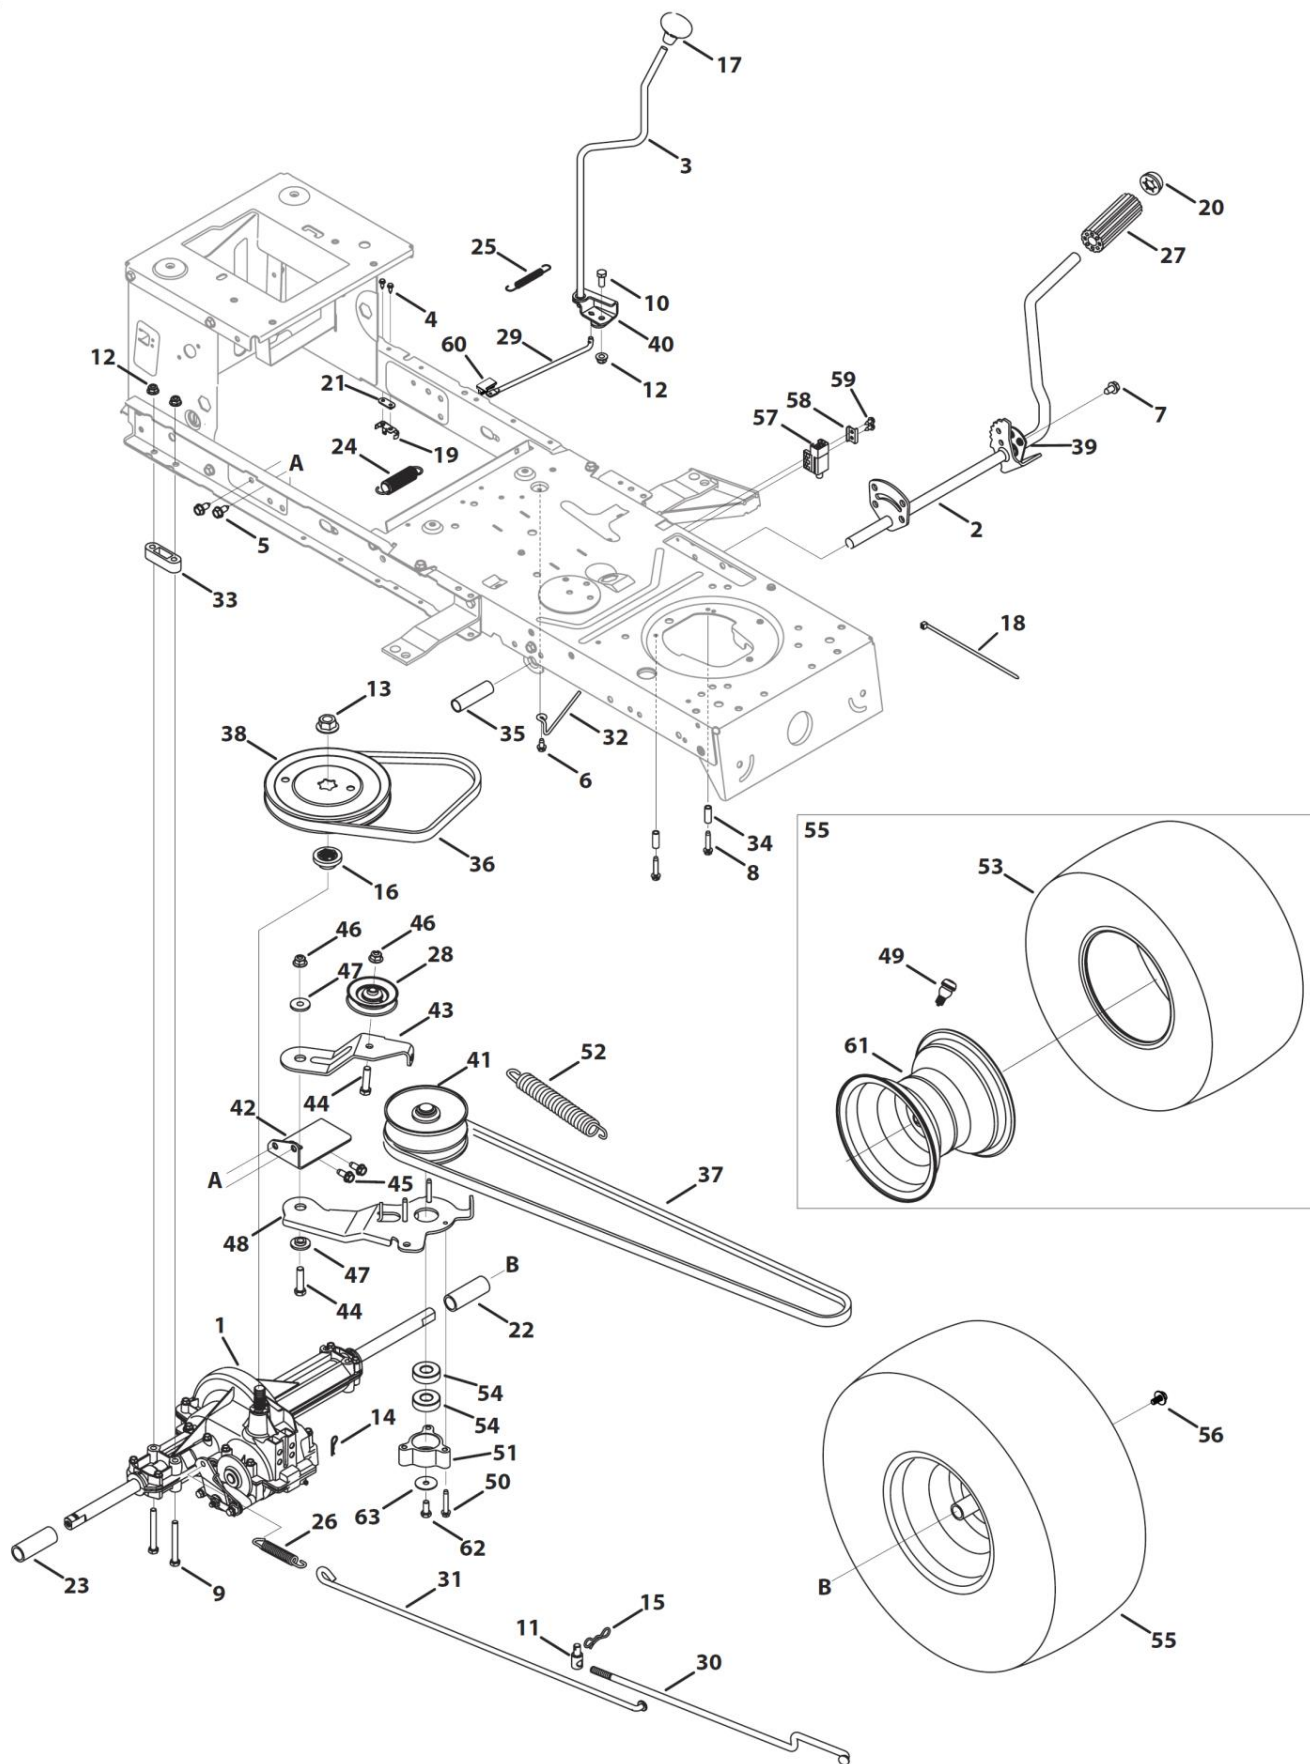

Ref.	Part Number	Description	Ref.	Part Number	Description
1	918-04566A	Transmission Drive Assembly	33	948-0334	Spacer, T-Axle, 42" Only
2	647-04034C	Pedal Assembly	34	750-0566A	Spacer, .260 x .375 x 1.030 LG
3	647-04266A	Shaft Lever Assembly	35	750-0802	Spacer, .640 ID x .76 OD x 2.63
4	710-0227	Screw, 8-18:0.500	36	954-05040	V Belt, 5L 35.25 POLY, 38" & 42"
5	710-04484	Screw, 5/16-18 x .750	37	954-04249A	V Belt, 5L 70.90 POLY
6	710-0599	Screw, 1/4-20 x 0.500	38	956-04002	V Pulley 7.25 DIA SPUN
7	710-0604A	Screw, 5/16-18 x 0.625	39	783-04536B	Pedal Support Bracket
8	710-0809	Screw, 1/4-20 x 1.250	40	783-04595A	Shaft Adjust Bracket
9	710-0176	Hex Screw, 5/16-18 x 2.75	41	956-04015A	Variable Speed Pulley Assembly
	710-1266	Hex Screw, 5/16-18 x 3.50	42	683-04176A	Transmission Bracket Assembly
10	710-3008	Hex Screw, 5/16-18 x .75	43	753-05147	Idler Bracket Assembly
11	711-06103	Ferrule, 3/8-24 X .375 DIA.	44	710-0347	Hex Screw, 3/8-16 x 1.75
12	712-04063	Flangelock Nut, 5/16-18	45	710-1260A	Screw, 5/16-18 x 0.750
13	712-0700	Flange Nut, 9/16-18	46	712-04065	Flangelock Nut, 3/8-16
14	914-0209	Cotter Pin INT- .125 DIA	47	938-0347	Shoulder Spacer, .625 ID x .169
15	714-04040	Bow-Tie Cotter Pin, 72	48	753-05147	Bracket Assembly
16	718-04407	Pulley Hub, 5/8 SPLINE	49	934-0255	Valve, tubeless Air
17	720-04028	Shift Knob	50	710-0778	Screw, 1/4-20 x 1.500
18	725-0157	Cable Tie	51	718-04261	Bearing Cup
19	725-1644	Short Spring Switch	52	732-04746	Extension Spring, .94 OD x 6.75 LG
20	726-0214	Push Cap, 5/8	53	734-1730	Tire, 20 X 8 X 8 Sq Shldr, 38/42"
21	926-0320	Plate Insulator Nut		734-04241-0901	Tire, 20 X 8 X 8 Rd Shldr, 38/42"
22	731-04602	Sleeve, .758 x .821 x 3.3125	54	941-0600	Ball Bearing, 17 x 40 x 12
23	731-04604	Sleeve, .758 x .821 x 2.4375	55	634-04324	Wheel, 20 x 8 x 8, 38/42"
24	732-04306	Spring Extension, .80 OD x 3.28 LG		634-0104	Wheel, 20 x 8 x 8, 38/42"
25	732-04488	Spring Extension, .38 OD x 3.25 LG	56	710-05339A	Screw, 5/16-24 x .750
26	732-0716D	Spring Extension, .59 OD x 4.00 LG	57	725-04363	Switch Interlock
27	735-0239	Foot Pad, 4.0 LONG	58	17962	Plate Switch
28	756-04325	Idler Pulley	59	738-04237A	Shoulder Screw, #10-32 x .500
29	747-05243	Shift Rod, 42"	60	731-06894	Shift Plate Bearing
	747-05244	Shift Rod, 38" & 42"	61	634-04369	Rim, 8.0 x 7.0 x .750, 38/42"
30	747-05186	Variable Speed Control Rod	62	710-0627	Hex Screw, 5/16-24 x .750
31	747-05188	Brake Rod	63	736-0362	Flat Washer, .330 x 1.25 x .06:HT
32	747-04969	Belt Keeper Rod			


42" Deck

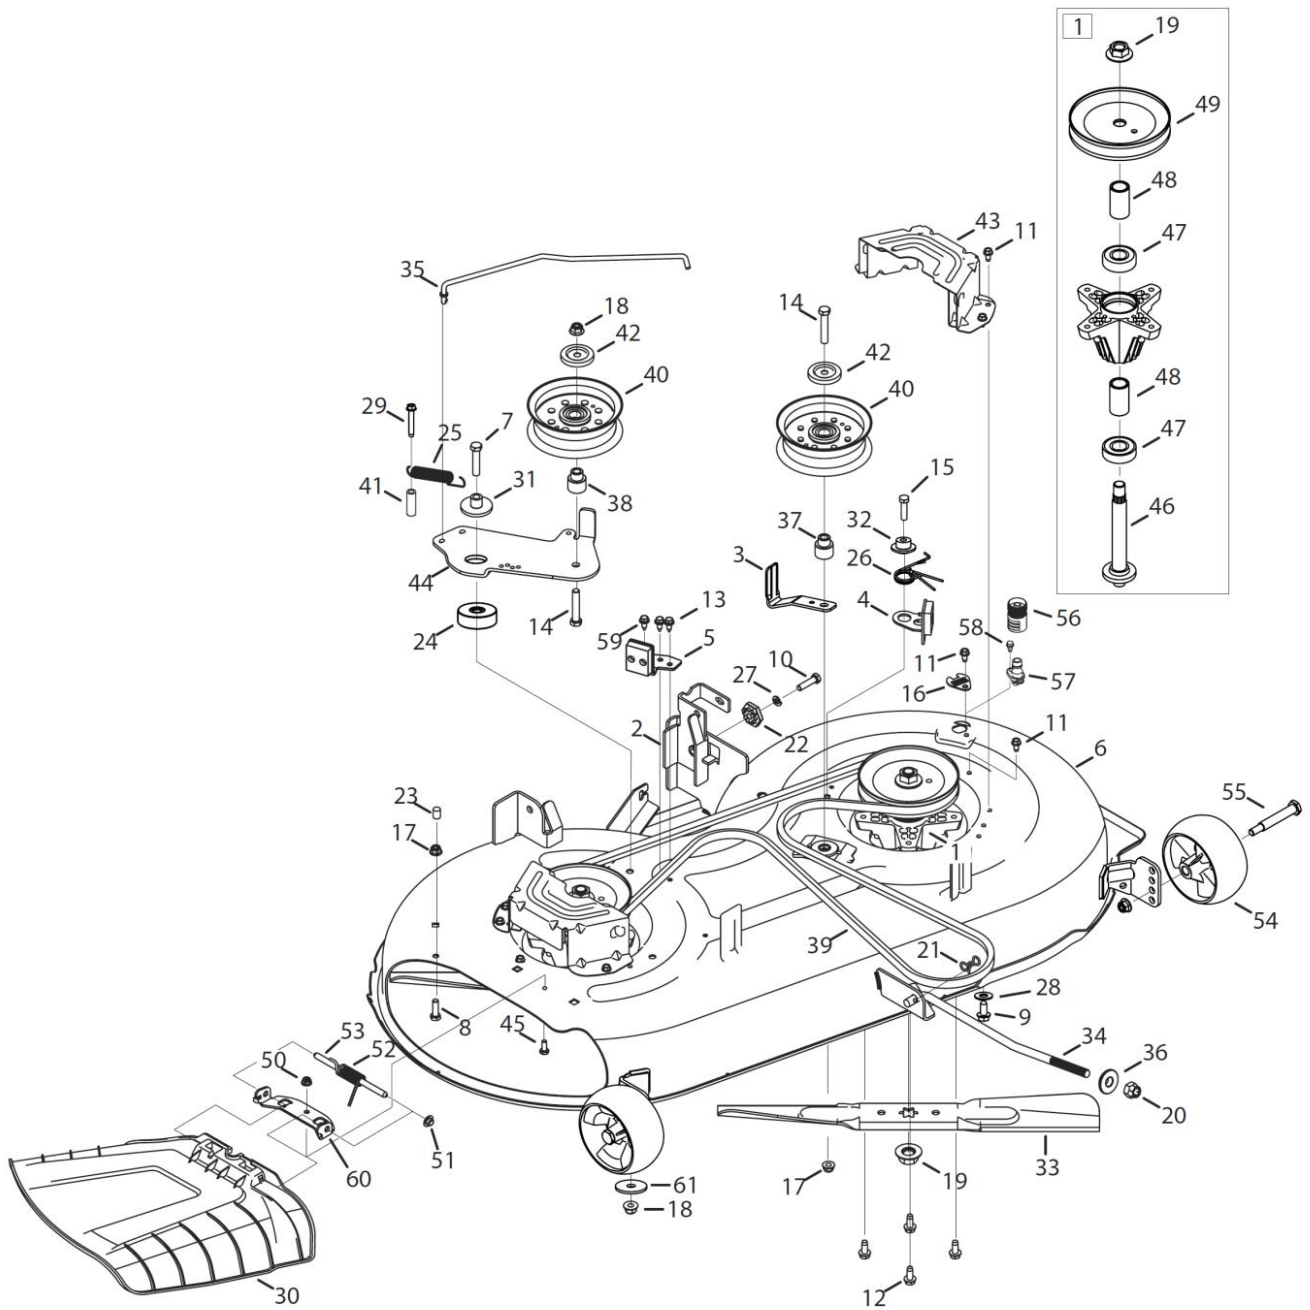

Ref.	Part Number	Description
1.	918-06991	Spindle Ass'y, Pulley, 6.2 Dia
2.	683-0254B	Bracket Ass'y, Deck, Hanger LH
3.	783-08690	Belt Keeper
4.	983-05183	Brake Assembly, Deck, LH
5.	983-05182	Brake Assembly, Deck, RH
6.	983-05184	Deck Assembly, 42"
	983-05185	Deck Assembly, 42", w/o wheels
7.	710-0347	Hex Screw, 3/8-16 x 1.75
8.	710-0376	Hex Cap Screw, 5/16-18 x 1.00
9.	710-04484	Screw, Self-tapping, 5/16-18, .750
10.	710-0528	Hex Screw, 5/16-18, 1.25, Gr5, Std
11.	710-0599	Screw, Self-tapping, 1/4-20, 0.500
12.	710-1260A	Screw, 5/16-18 x 0.750
13.	710-06133	Screw, M6-1 x .625
14.	710-3096	Hex Screw, 3/8-16, 2.00, Gr8, Std
15.	710-06213	Hex cap Screw, 5/16-18 x 1.25
16.	783-06464	Deck Wash Plug
17.	712-04063	Nut, Flange Lock, 5/16-18, Grf
18.	712-04065	Nut, Flange Lock, 3/8-16, Grf
19.	712-0417A	Nut, Flange, 5/8-18
20.	712-04243	Flange Lock Nut, 1/2-13
21.	714-04043	Bow-Tie Cotter Pin
22.	917-04074	Gear, Deck, Adjustment
23.	720-05010	Cap, .290 x .500
24.	750-06184	Spacer, .385 x 1.75 x .585
25.	732-04629	Extension Spring, .750 X 4.77
26.	732-05151A	Torsion Spring, LH
27.	936-0119	Washer, Lock, 5/16, Regular Duty
28.	936-0300	Flat Washer, .406 x .875 x .059
29.	710-0778	Screw, Self Tapping, 1/4-20, 1.50
30.	631-04354B	Chute Deflector Assembly

Ref.	Part Number	Description
31.	738-05082	Shoulder Spacer, .970 x .190
32.	738-05088	Shoulder Spacer, .75 x .145
33.	942-04308	Blade, Cut, 21.23" 2-In-1, Econ
34.	747-05141B	Rod, Lift, Deck, Frt, 12.7
35.	747-06538	Brake Rod
36.	748-04069	Deck Lift Pivot Cup
37.	748-05029A	Shoulder Spacer, Idler
38.	748-05037B	Shoulder Spacer, Pivot Idler
39.	954-04060C	Belt, V Type, A Sec X 96.5
40.	756-05034	Pulley, Idler, 4.50"Dia
41.	750-0566A	Spacer, .260 x .375 x 1.030
42.	783-08389	Pulley Cap
43.	783-08510	Deck Belt Cover, 42
44.	783-08654B	Deck Idler Bracket
45.	710-0751	Hex Cap Screw, 1/4-20 x .62
46.	738-1186A	Shift, Spindle, 6.11.
47.	941-0919B	Bearing, Ball, .787id x 1.85 Odx.551
48.	750-04936	Spacer, .792 x 1.060 x 1.860
49.	756-05031	Pulley, Deck, 5.4 Dia
50.	712-04064	Nut, Flange Lock, 1/4-20, Nylon
51.	726-04009	Push Cap
52.	732-05261	Spring, Torsion, .440 ID x 1.75
53.	747-06290B	Hinge Pin
54.	734-04155	Wheel, Deck, 5.0 Dia Ball
55.	938-3056	Bolt, Shoulder, .496 x 2.50, 3/8-16
56.	921-04041	Water Nozzle Adapter
57.	731-07487	Deck Wash Nozzle
58.	738-04278	Shoulder Screw, 1/4-20 x 0.50
59.	738-04184A	Shoulder Screw, 1/4-20
60.	783-08504A	Bracket, Chute, 42"
61.	936-3039	Flat Washer, .406 x 1.50 x .105

B&S Model 28

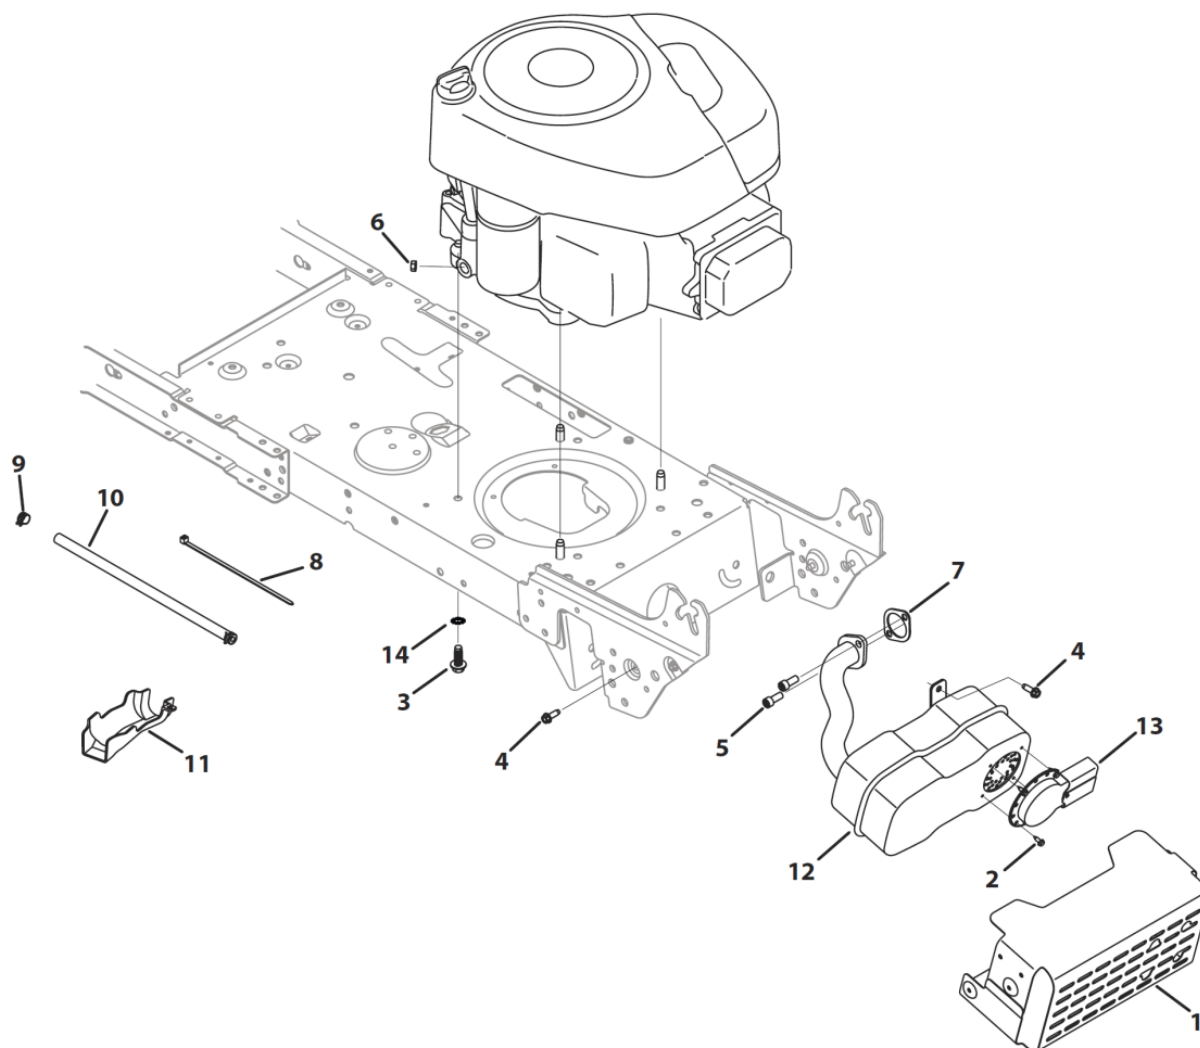

Ref.	Part Number	Description
1	683-04549A	Muffler Shield Assembly with Weld
2	710-0227	Screw, 8-18 x .500
3	710-04683C	Screw, 3/8-16 x 1.0
4	710-0642	Screw, 1/4-20 x .750
5	710-1314A	Socket Screw, 5/16-18 x .750
6	712-0271	Sems Nut, 1/4-20
7	BS-692236	Exhaust Gasket, 10 HP Briggs
8	725-0157	Cable Tie
9	726-0205	Clamp Hose, .490 diameter
10	751-10349-28	Fuel Hose, Low Permeation
11	731-05628	Oil Drain Sleeve
12	951-10448D	Muffler, Single Inlet
13	751-11053A	Muffler Deflector Long
14	736-0148	Lock Washer, 3/8