



TB27LS 170-DU パーツリスト

Muffler

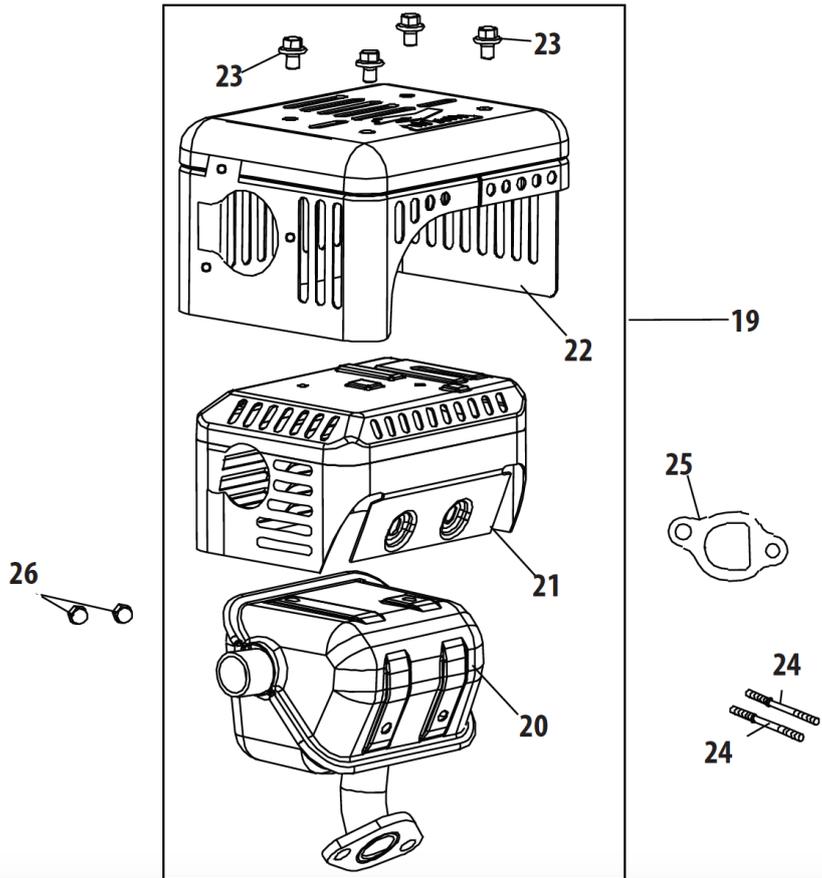

Ref.	Part Number	Description
19	651-05025	Muffler Assembly
20	751-14271	Muffler Body
21	951-14311	Muffler Shield
22	951-14310	Muffler Guard
23	710-06073	Bolt M5×8
24	710-04911	Stud M8×34
24	951-10657	Muffler Stud Assy
25	951-11289	Exhaust Pipe Gasket
26	712-04214	Nut, M8



Air Cleaner

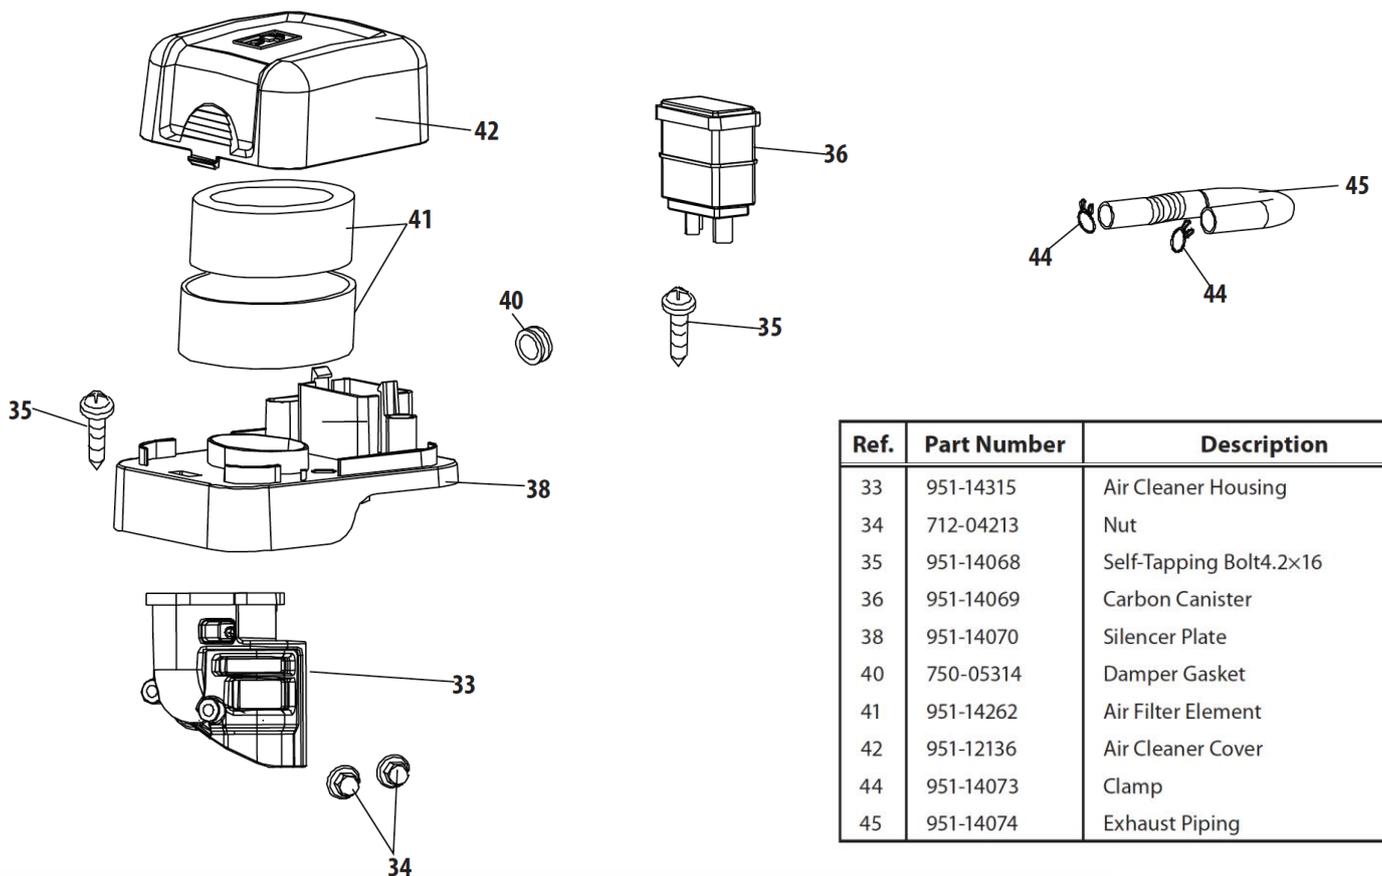

Ref.	Part Number	Description
33	951-14315	Air Cleaner Housing
34	712-04213	Nut
35	951-14068	Self-Tapping Bolt 4.2×16
36	951-14069	Carbon Canister
38	951-14070	Silencer Plate
40	750-05314	Damper Gasket
41	951-14262	Air Filter Element
42	951-12136	Air Cleaner Cover
44	951-14073	Clamp
45	951-14074	Exhaust Piping

TB27LS 170-DU パーツリスト


Carburetor Assembly

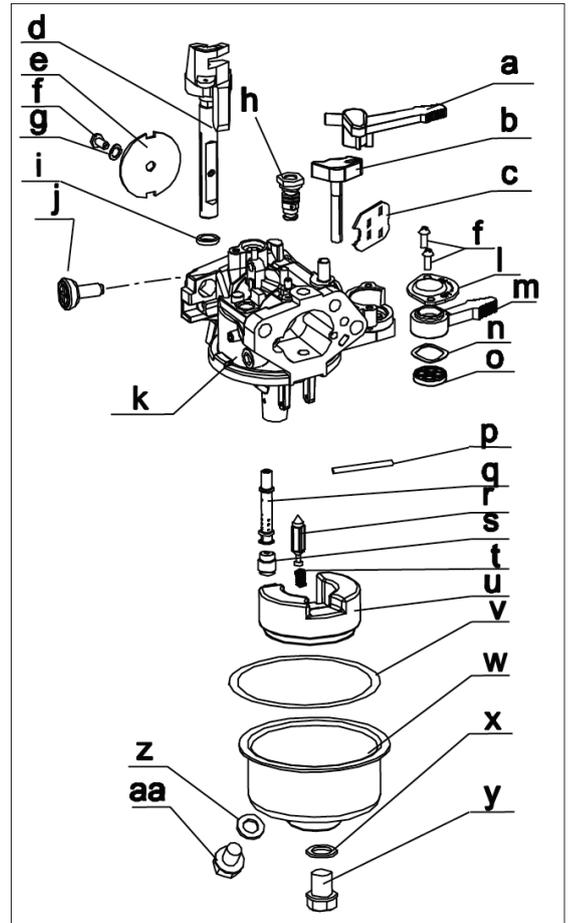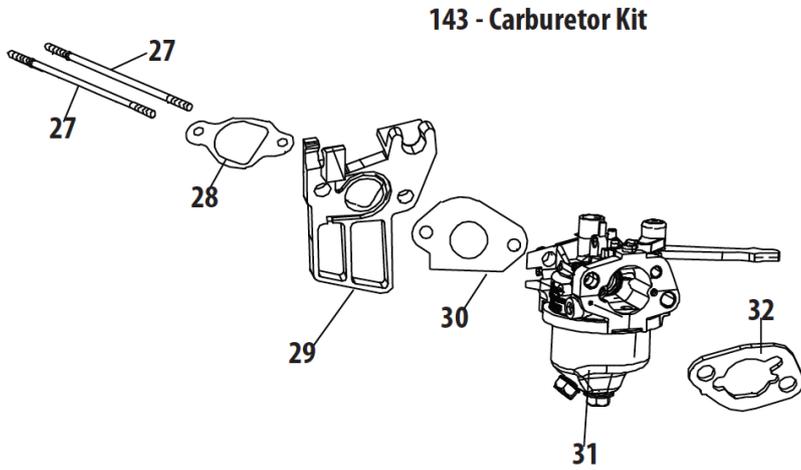

Ref.	Part Number	Description
27	710-05101	Stud M6×110
28	951-11567	Carburetor Insulator Gasket
29	951-11568	Carburetor Insulator
30	951-11569A	Carburetor Gasket
31	651-05106	Carburetor Assembly
32	951-11571	Carburetor Gasket Plate
143	651-05107	Carburetor Kit Dn-170 (Incl.h,p,q,r,s,t,u,v,x,z)
a	n/a	Control Lever,Choke
b	n/a	Choke Shaft
c	n/a	Choke Plate
d	n/a	Throttle Shaft
e	n/a	Throttle Plate
f	710-05469	Screw M3×6
g	736-04638	Lock Washer
h	793-00118	Idle Jet Assembly
i	n/a	Gasket, Throttle Plate
j	n/a	Idle Speed Adjusting Screw

Ref.	Part Number	Description
k	n/a	Carburetor Body
l	n/a	Fuel Shutoff Cover
m	n/a	Fuel Shutoff Lever
n	n/a	Fuel Shutoff Washer
o	n/a	Fuel Shutoff Valve
p	n/a	Float Pin
q	n/a	Emulsion Tube
r	n/a	Needle Valve
s	n/a	Main Jet
t	n/a	Needle Valve Spring
u	n/a	Float
v	951-11589	Fuel Bowl Gasket
w	n/a	Fuel Bowl
x	951-11348	Fuel Bowl Gasket
y	710-04945	Fuel Bowl Mounting Bolt
z	951-11349	Fuel Drain Plug Gasket
aa	710-04938	Fuel Drain Plug

Crankshaft & Crankcase

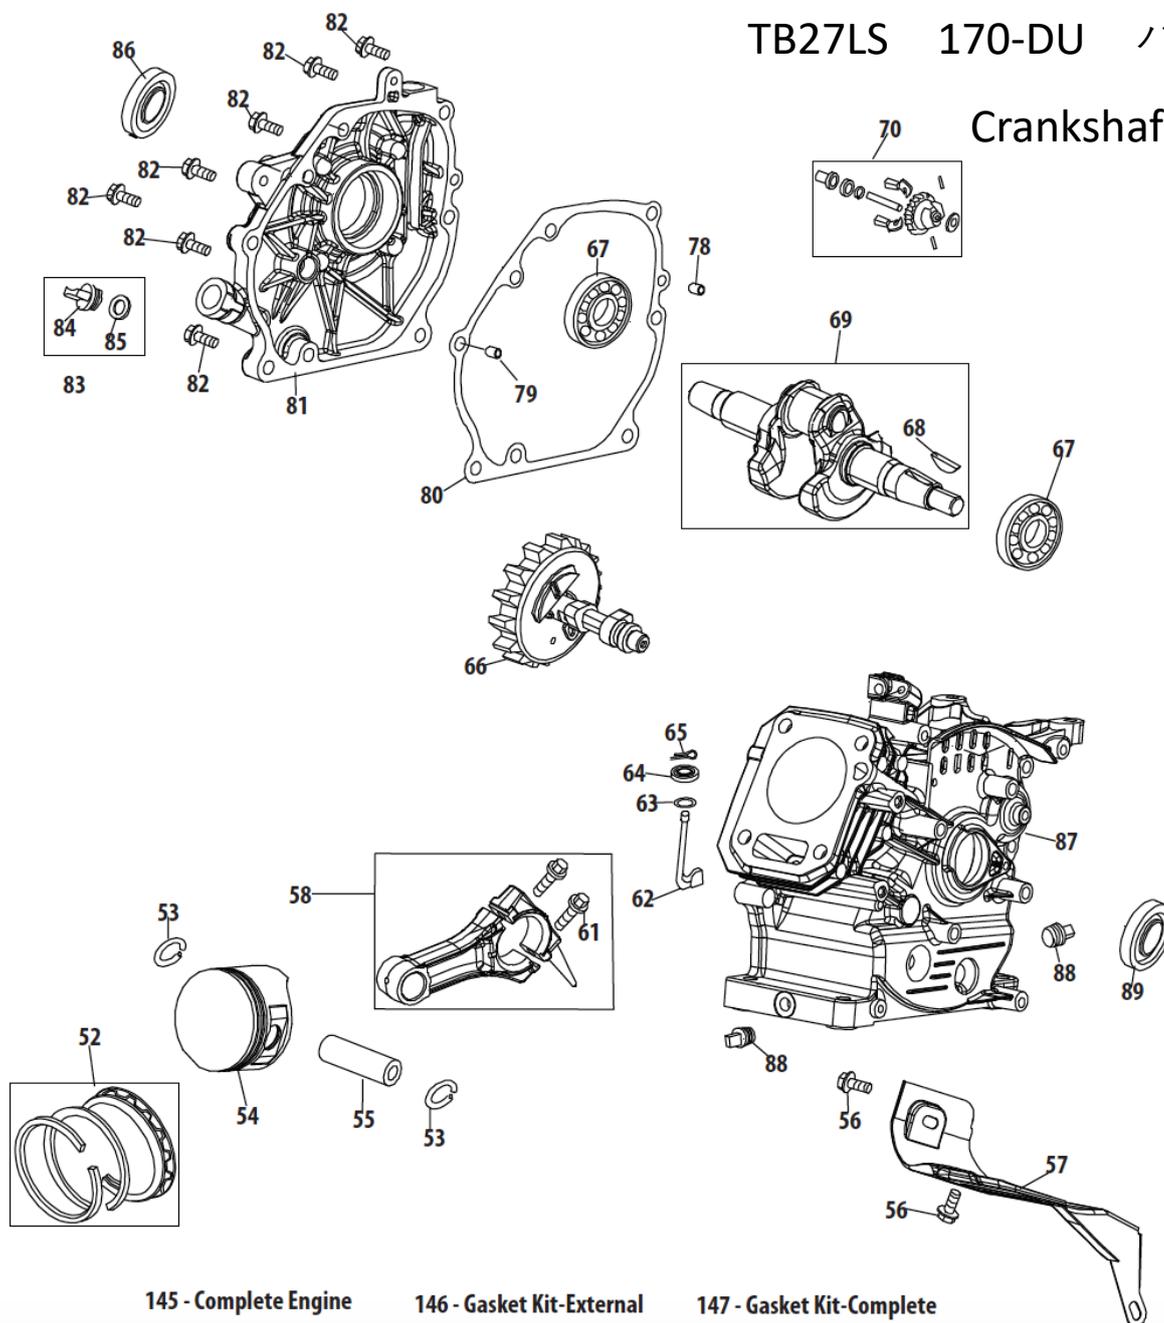

145 - Complete Engine


146 - Gasket Kit-External

147 - Gasket Kit-Complete

Ref.	Part Number	Description	Ref.	Part Number	Description
52	951-14317	Piston Ring Kit	81	951-12125	Crankcase Cover
53	951-11632	Piston Pin Snap Ring		951-14142	Crankcase Cover Kit (Incl.67,80-86)
54	951-14318	Piston	82	710-04932	Bolt M8x32
55	951-11633	Piston Pin	83	951-11283	Oil Fill Plug Assembly
56	710-04915	Bolt M6x12	84	951-12394	Oil Plug
57	951-11113	Air Shield	85	951-11577	O-Ring 15.8x2.5
58	951-11573	Connecting Rod Assembly	86	951-11578	Oil Seal, 25x 41.25x6
61	710-05116	Connecting Rod Bolt	87	951-14144	Crankcase Service Kit (Incl.64,67,86-89)
62	951-14053	Governor Arm		951-05031	Shortblock Assembly (Incl.5,25,28-30,46,48,49, 52-55,58-89)
63	736-04461	Washer 5.2x1.9	88	751-12514A	Oil Drain Plug
64	951-11902	Governor Seal	89	951-12126	Oil Seal 25x 41.25x6
65	714-04078	Cotter Pin	145	952Z170-DU	Complete Engine
66	751-11575A	Camshaft Assembly	146	951-12026A	Gasket Kit-External (Incl.5,25,28-30,32)
67	951-11369	Radial Ball Bearing, 6205	147	951-05032	Gasket Kit-Complete (Incl.5,25,28-30,32,46,63, 64,80,86,89)
68	951-10307	Woodruff Key			
69	951-12160	Crankshaft Assembly			
	951-14143	Crankshaft Service Kit (Incl.67-69,86,89)			
70	717-05152	Governor Gear/Shaft Assembly			
78	715-04092	Dowel Pin 7x14			
79	715-04096	Dowel Pin 9x14			
80	951-11371	Crankcase Cover Gasket			

TB27LS 170-DU パーツリスト

Tank & Mounting

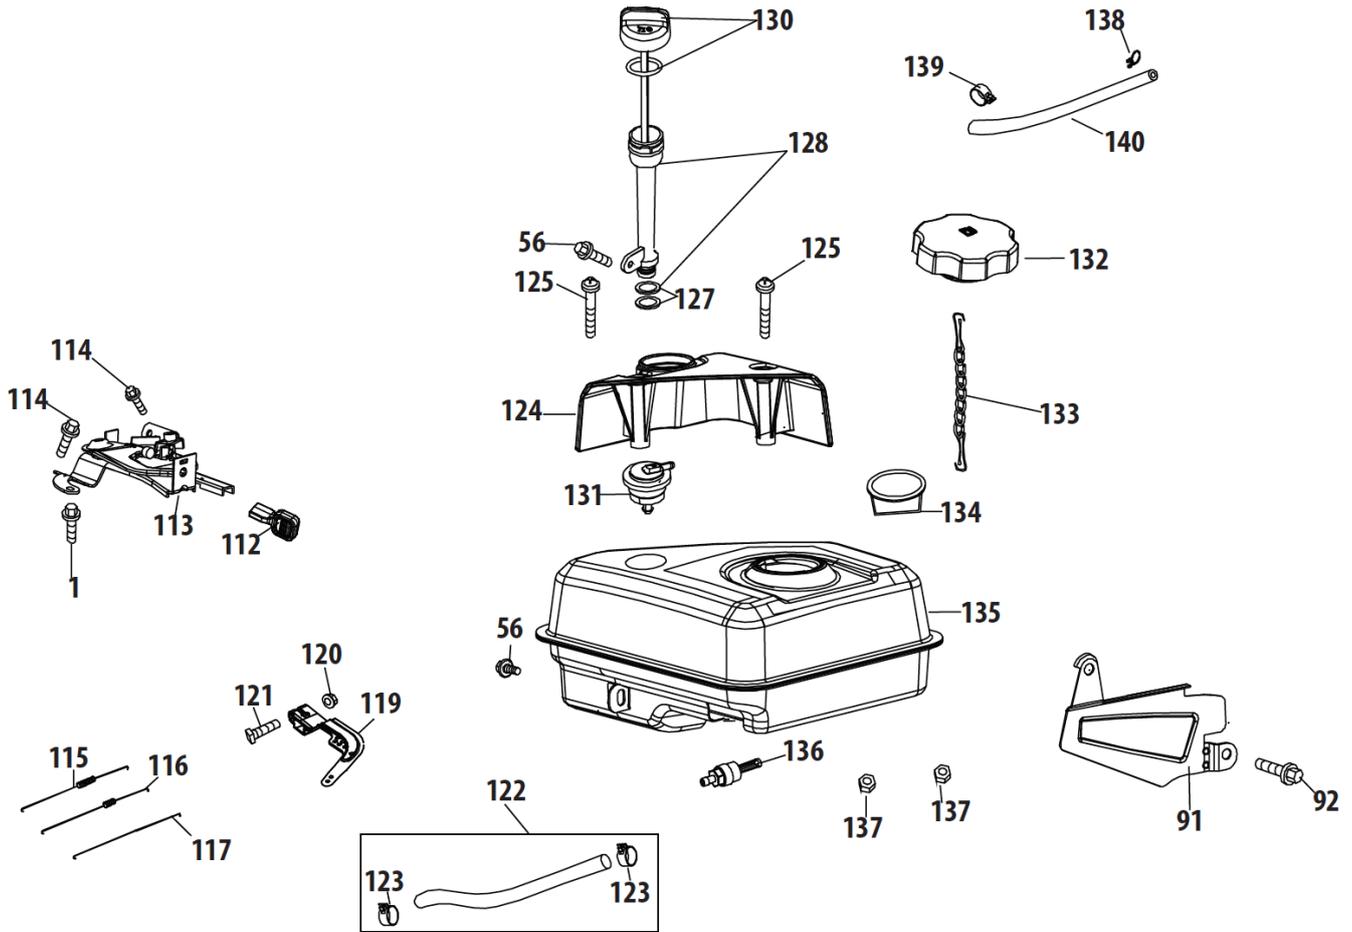


Ref.	Part Number	Description
1	710-04968	Bolt M6×16
56	710-04915	Bolt M6×12
91	951-11110	Air Flow Shield
92	710-04940	Bolt M6×10
112	951-11067	Throttle Control Knob
113	951-12131	Primer Bracket
114	710-05103	Bolt M6×12
115	951-11585	Governor Spring
116	951-10664	Throttle Linkage Spring
117	951-10665	Throttle Linkage
119	951-11106	Governor Arm
120	712-04212	Nut M6
121	710-04908	Governor Arm Bolt
122	951-10650	Kit-Fuel Line
123	951-11700	Fuel Hose Clamp

Ref.	Part Number	Description
124	951-11914	Dipstick Decoration Cover
125	710-04905	Bolt
127	951-11381	Oil Fill Tube O-Ring 15×1.5
128	951-11913	Oil Fill Tube Assy
130	951-12482	Dipstick Assy
131	951-14075	Roll Over Valve
132	951-12535	Cap Comp,Fuel
133	951-14076	Fuel Cap Chain
134	951-11933	Fuel Filter
135	951-14332	Fuel Tank Assembly
136	951-10651	Fuel Tank Nipple
137	712-05015	Nut M6
138	723-04093	Hose Clamp
139	732-05143	Hose Clamp
140	751-14541	Primer Hose Assembly

TB27LS 170-DU パーツリスト

Fly wheel

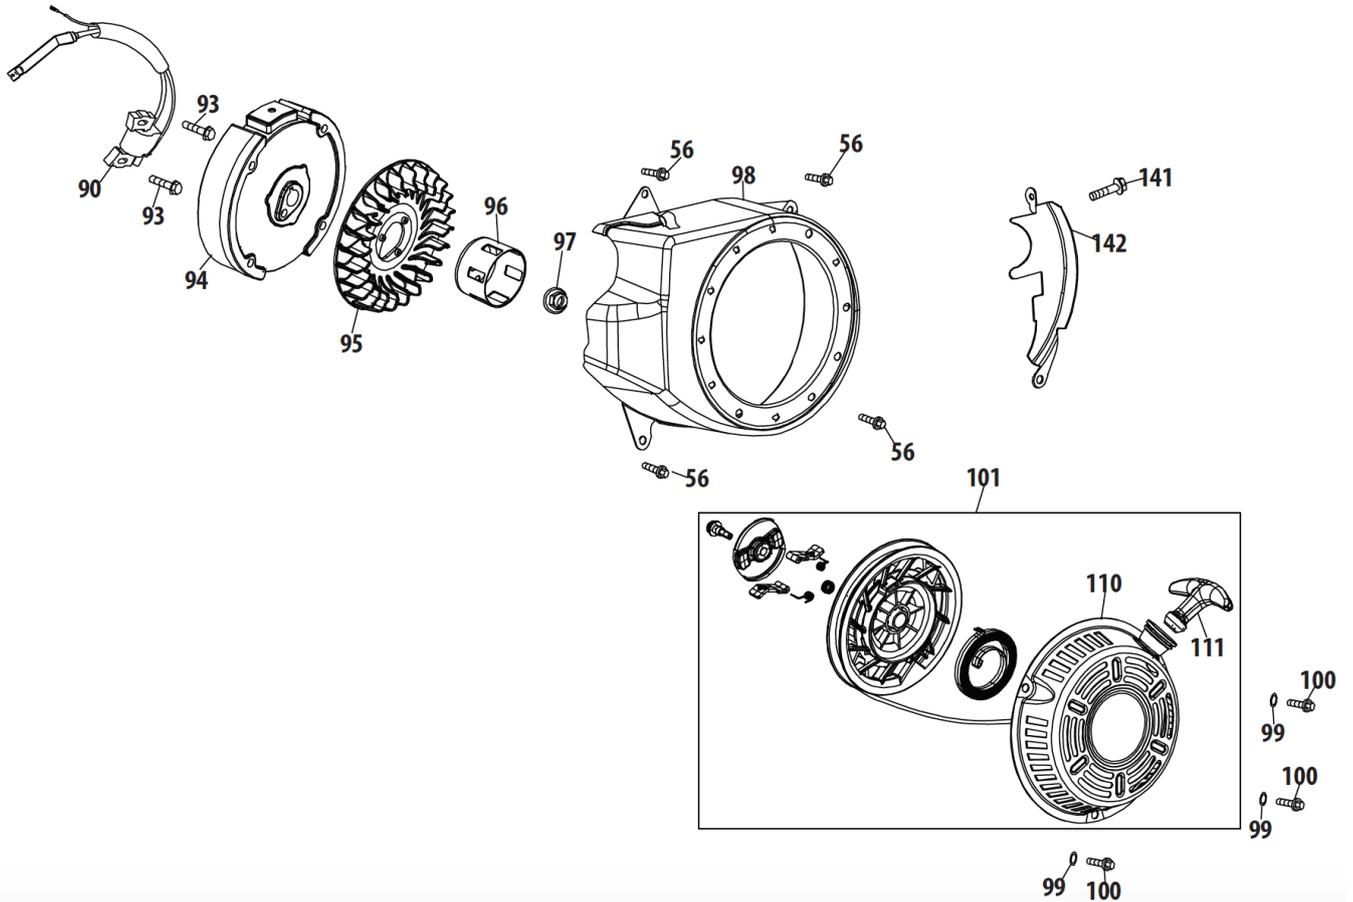


Ref.	Part Number	Description
56	710-04915	Bolt M6×12
90	951-10792	Ignition Coil Assembly
93	710-04919	Bolt M6×25
94	951-14320	Flywheel
95	951-10934	Cooling Fan
96	951-10911	Starter Cup
97	712-04209	Flywheel Nut, M14 X 1.5
98	951-11583	Blower Housing

Ref.	Part Number	Description
99	736-04455	Gasket 6
100	710-04974	Bolt M6×10
101	951-12418	Recoil Starter Assembly
110	951-12644	Blower Housing
111	731-09780	Starter Handle
141	710-04918	Bolt M6×20
142	951-14138	Blower Housing Shield

TB27LS 170-DU パーツリスト

Cylinder Head

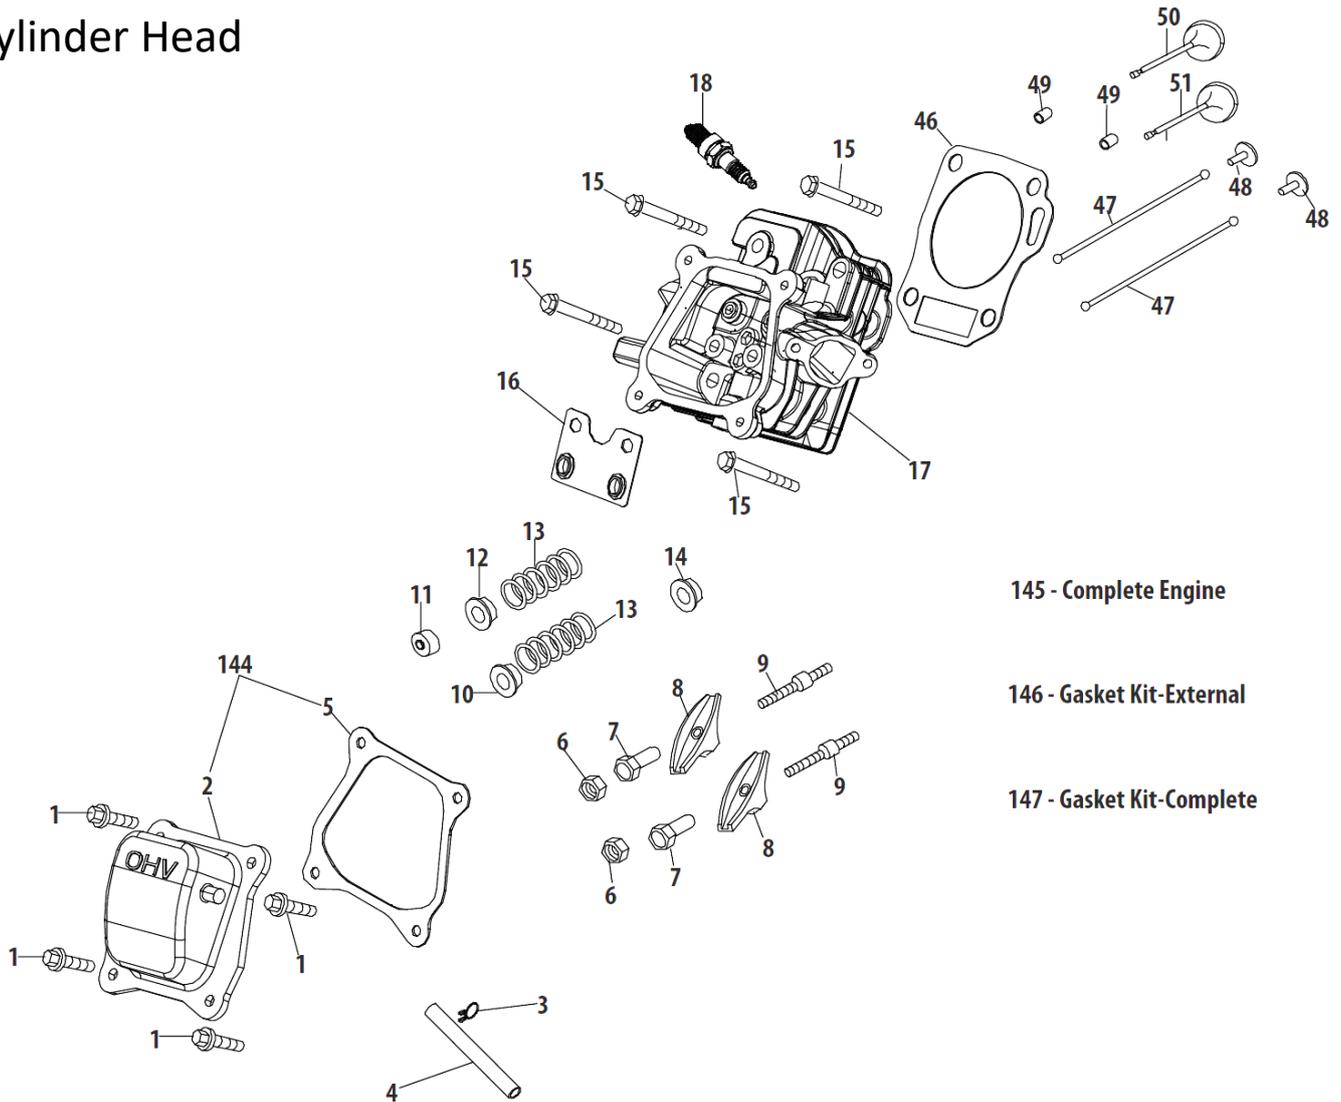

145 - Complete Engine

146 - Gasket Kit-External

147 - Gasket Kit-Complete

Ref.	Part Number	Description
1	710-04968	Bolt M6×16
2	951-11054B	Valve Cover
3	726-04101	Clamp, Fuel Hose
4	731-09541	Venting House
5	951-11565	Valve Cover Gasket
6	751-11124	Nut, Pivot Locking
7	751-11123	Adjusting Nut ,Valve
8	951-11893	Rocker Arm
9	710-04902	Bolt, Pivot
10	951-12000	Valve Spring Retainer (Intake)
11	951-12002	Exhaust Lash Cap
12	951-12003	Valve Spring Retainer (Exhaust)
13	951-12004	Valve Spring
14	951-11894	Valve Seal (Intake)
15	710-06080	Bolt M8×55
16	951-11895	Push Rod Guide

Ref.	Part Number	Description
17	951-05029	Cylinder Head Assembly (Incl.5-14,16,17,25,28-30,46,50,51)
18	951-10292	Spark Plug/F6Rtc
46	951-14316	Gasket, Cylinder Head
47	951-10648	Kit-Push Rod
48	951-11899	Tappet
49	715-04108	Dowel Pin 10×16
50	951-10647A	Valve Kit
51	951-10647A	Valve Kit
144	951-05033	Valve Cover Kit
145	952Z170-DU	Complete Engine
146	951-12026A	Gasket Kit-External (Incl.5,25,28-30,32)
147	951-05032	Gasket Kit-Complete (Incl.5,25,28-30,32,46,63, 64,80,86,89)