























Parts Manual

Mfg. No: 124L02-0530-F1





















Model Components	Page
Air Cleaner, Exhaust System, Fuel Supply.	4
Alternator, Controls, Electrical, Flywheel Brake, Governor Spring, Ignition.	8
Blower Housing/Shrouds.	12
Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group, Valves.	14
Carburetor.	20
Electric Starter, Flywheel, Rewind Starter.	24
Replacement Engine - US & Canada.	26

Not For
Reproduction

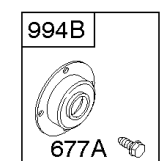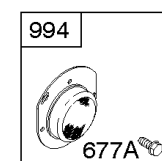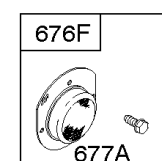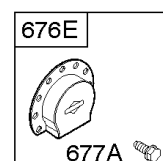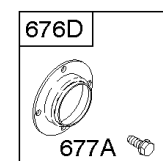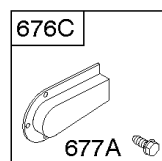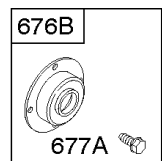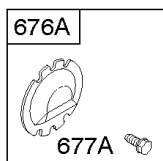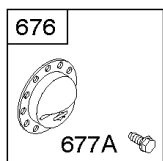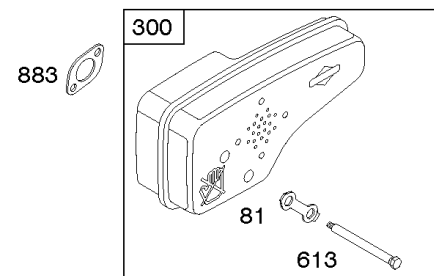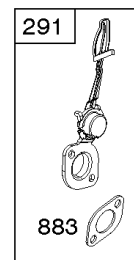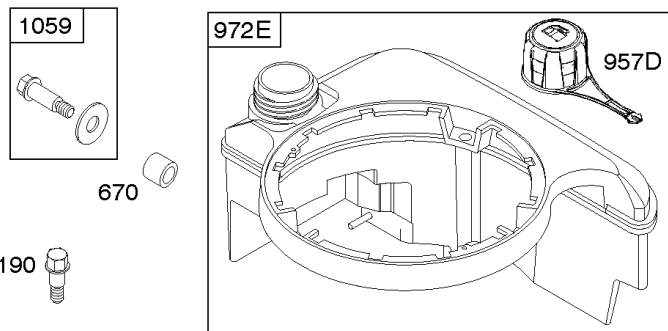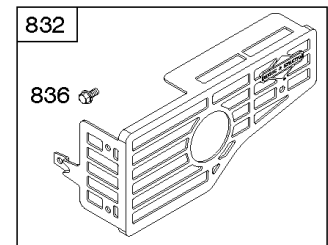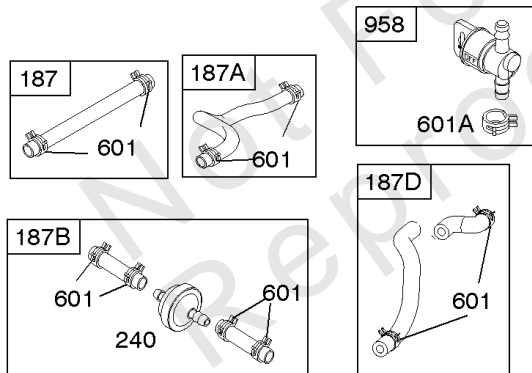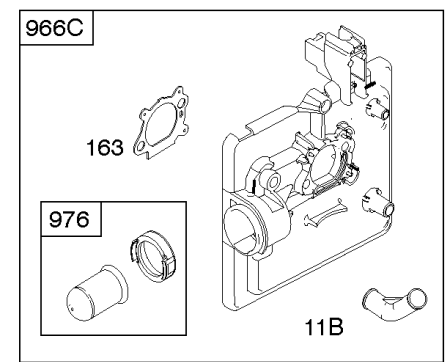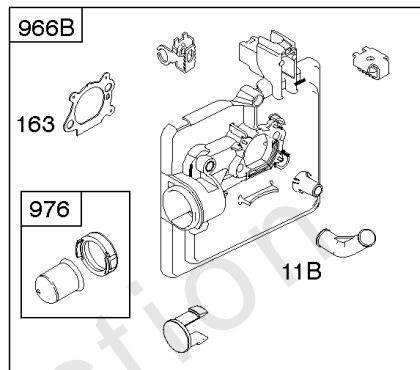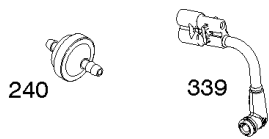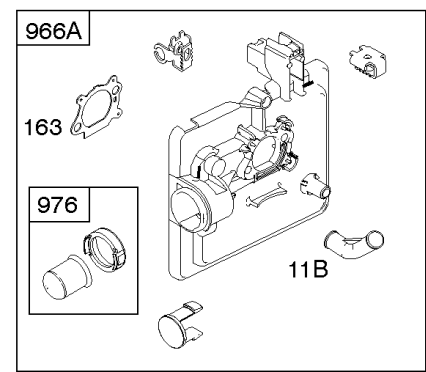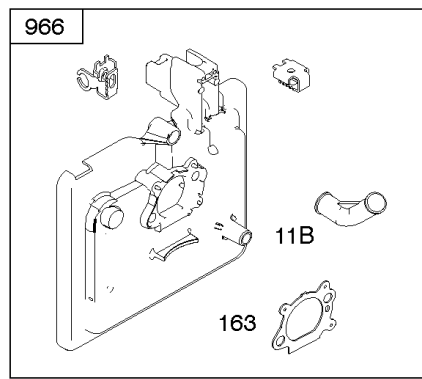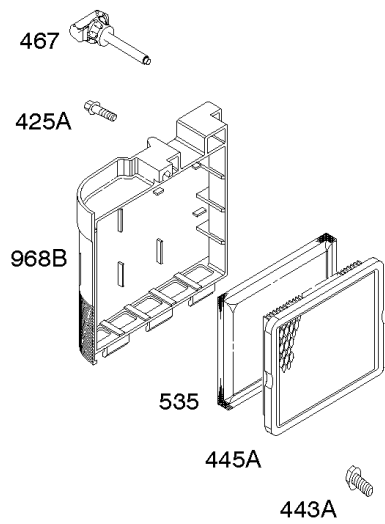

Air Cleaner, Exhaust System, Fuel Supply






REF NO	PART NO	QTY	DESCRIPTION
11B	691923		TUBE, Breather
81	691740		LOCK, Muffler Screw
163	795629		GASKET, Air Cleaner -(Air Cleaner)
187	791766		LINE, Fuel -(15" Long)(Cut To Required Length)
187A	791873		LINE, Fuel -(Molded)
187B	791891		LINE, Fuel -(Includes Filter)
187D	795090		LINE, Fuel -(Molded)
190	690940		SCREW -(Fuel Tank)
240	298090S		FILTER, Fuel
291	593208		THERMOSTAT
300	692038		MUFFLER
339	794797		TUBE/CONNECTOR ASSEMBLY
425A	690670		SCREW -(Air Cleaner Cover)
443A	692523		SCREW -(Air Cleaner Primer Base)
445A	491588S		FILTER, A/C Cartridge
467	790842		KNOB, Air Cleaner Cover
535	493537S		FILTER, Air Cleaner Foam
601	791850		CLAMP, Hose
601A	691038		CLAMP, Hose
613	691340		SCREW -(Muffler) (1/4-20 x 2.75 Inches Total Length, 2.25 Inch Shoulder Length)
613	790833		SCREW -(Muffler) (1/4-20 x 2.75 Inches Total Length, 2.08 Inch Shoulder Length)
670	692294		SPACER, Fuel Tank
676	396548		DEFLECTOR, Muffler
676A	393756		DEFLECTOR, Muffler -(Side Outlet)
676E	393760		DEFLECTOR, Muffler
676B	397931		DEFLECTOR, Muffler
676C	493871		DEFLECTOR, Muffler
676D	497682		DEFLECTOR, Muffler
676F	590745		DEFLECTOR, Muffler
677	690661		SCREW -(Muffler Deflector) (Thread Forming)
677A	593440		SCREW -(Muffler Deflector) (Self-Drilling & Tapping)
832	590486		GUARD, Muffler
836	690664		SCREW -(Muffler Guard)
883	691881		GASKET, Exhaust
957C	794793		CAP, Fuel Tank
957D	796577		CAP, Fuel Tank
958	698183		VALVE, Fuel Shut Off -(Plastic)
966C	794798		BASE, Air Cleaner -(Primer)
968B	692298		COVER, Air Cleaner
972E	796578		TANK, Fuel -(Plastic)

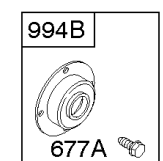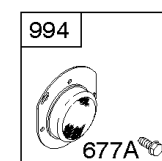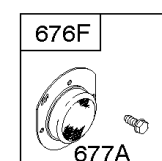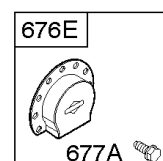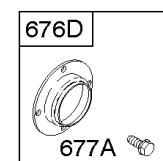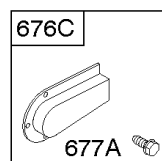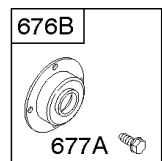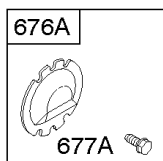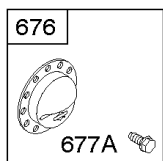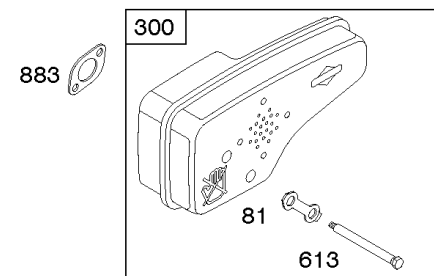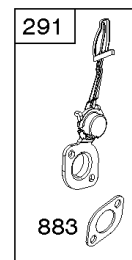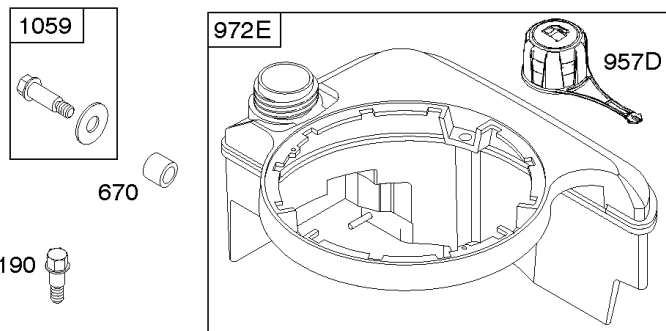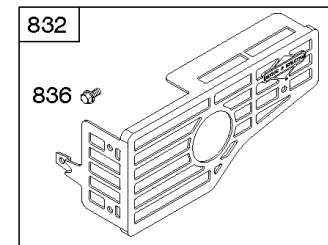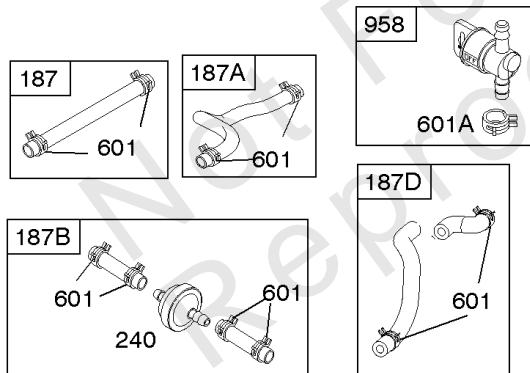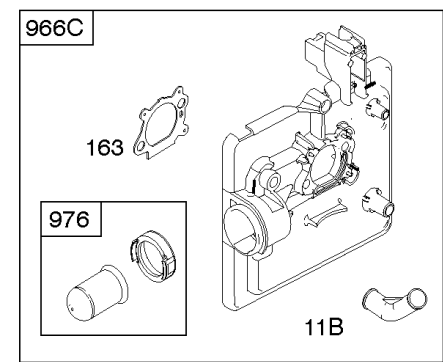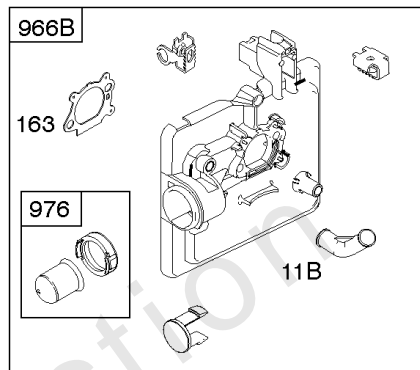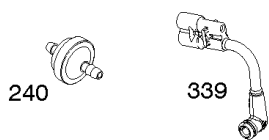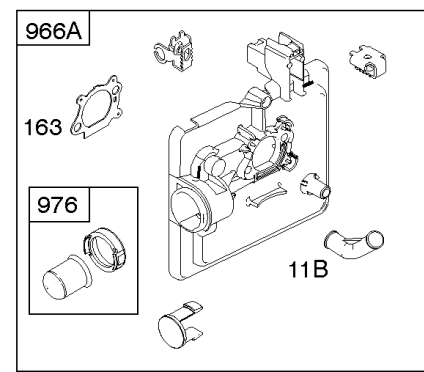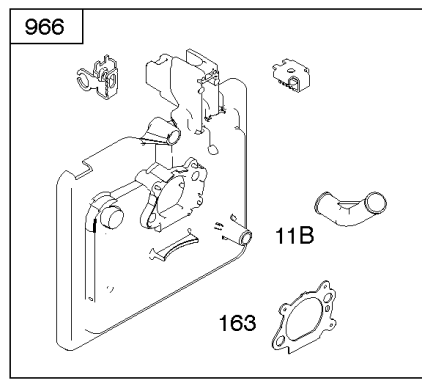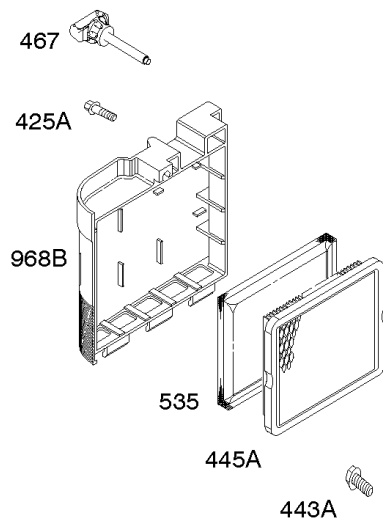





Air Cleaner, Exhaust System, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
976	694395		PRIMER, Carburetor
994	398067		ARRESTOR, Spark
994B	792245		ARRESTOR, Spark
1059	692311		KIT, Screw/Washer











Not For Reproduction

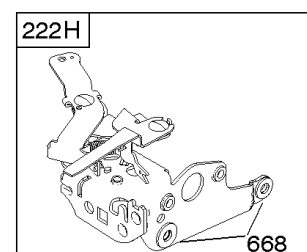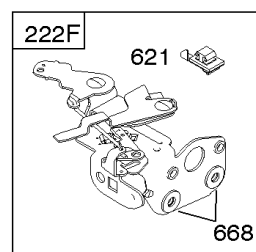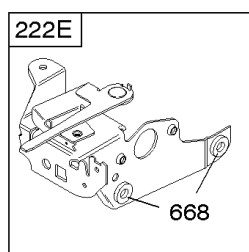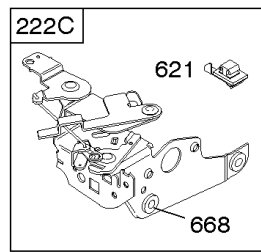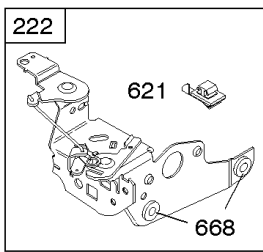

843 843A 188


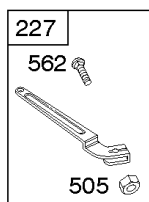
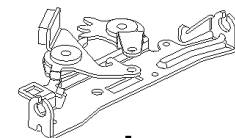
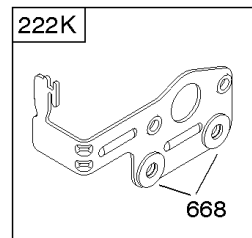
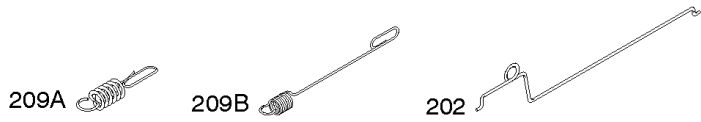


615 404 616

 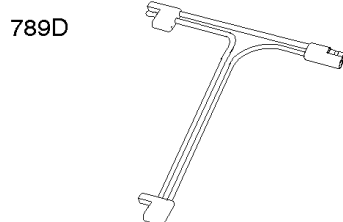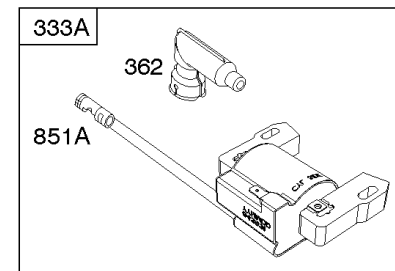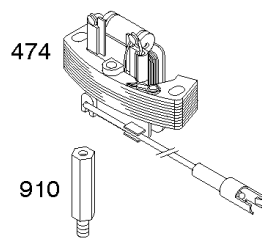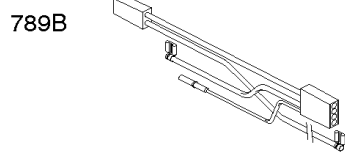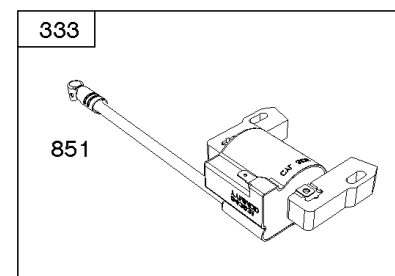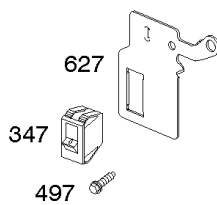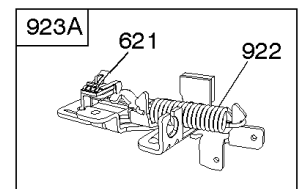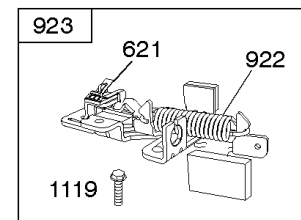 




Alternator, Controls, Electrical, Flywheel Brake, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
188	693399		SCREW -(Control Bracket)
202	691829		LINK, Mechanical Governor
209B	790944		SPRING, Governor
222E	692982		BRACKET, Control -(Manual Friction, 5 Position Manual Choke) -Used Before Code Date 09113000
222F	593541		BRACKET, Control -(Manual Friction, 5 Position Manual Choke) -Used After Code Date 09112900
227	690783		LEVER, Governor Control
265	690798		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
333	590454		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature)
347	691396		SWITCH, Rocker
356	692390		WIRE, Stop
356B	693010		WIRE, Stop
362	793351		SHIELD, Spark Plug
404	690272		WASHER -(Governor Crank)
474	691991		ALTERNATOR
497	690664		SCREW -(Stopswitch Bracket)
505	691251		NUT -(Governor Control Lever)
562	691119		BOLT -(Governor Control Lever)
615	690340		RETAINER, Governor Shaft
616	698801		CRANK, Governor
621	692310		SWITCH, Stop
627	792565		BRACKET, Stopswitch
635	66538S		BOOT, Spark Plug
668	493823		SPACER -(Includes 2)
745	691648		SCREW -(Brake)
789B	792685		HARNESS, Wiring
789D	796574		HARNESS, Wiring
843	691884		SLEEVE, Lever -(Speed Control)
843A	691895		SLEEVE, Lever -(Choke)
851	493880S		TERMINAL, Spark Plug
851A	692424		TERMINAL, Spark Plug
910	691094		STUD -(Alternator)
922	692135		SPRING, Brake





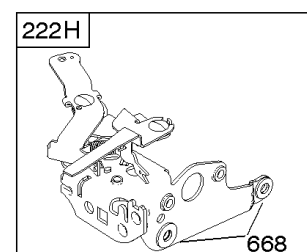
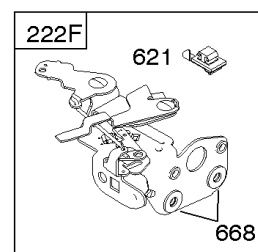
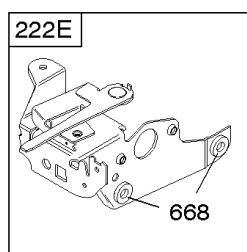
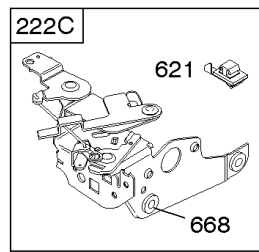
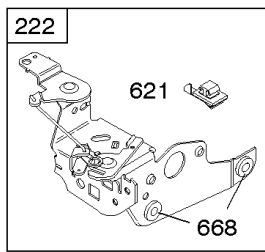


- 843
- 843A
- 188

- 209A
- 209B
- 202

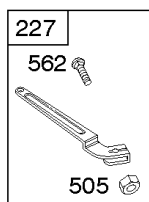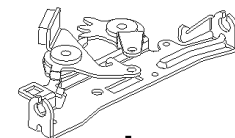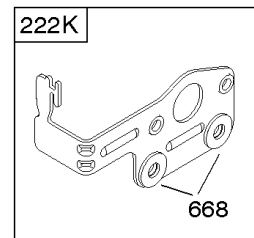














- 615
- 404
- 616
- 271
- 268
- 269
- 270
- 267
- 265

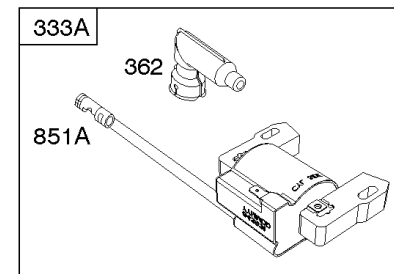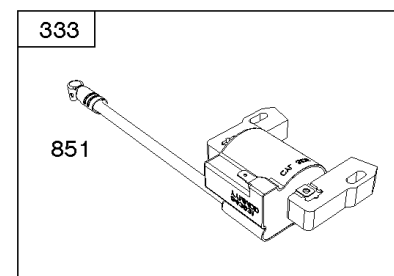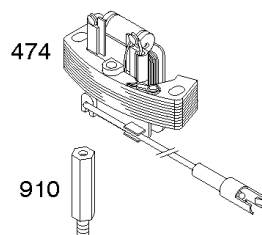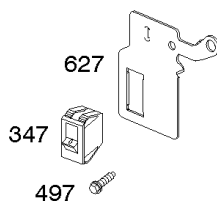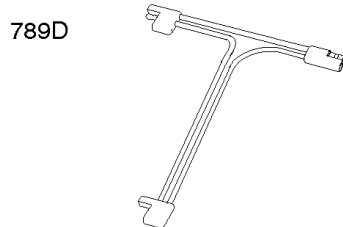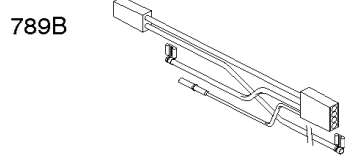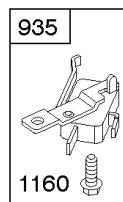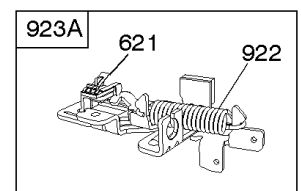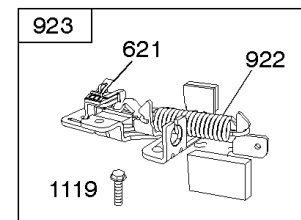

Alternator, Controls, Electrical, Flywheel Brake, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
923	796387		BRAKE -(With Stop Switch)
923A	796136		BRAKE -(Rewind Starter)
935	499421		SWITCH, Interlock -Used Before Code Date 08050100
1119	692979		SCREW -(Alternator) (Alternator)
1160	690345		SCREW -(Interlock Switch)

 Not For Reproduction

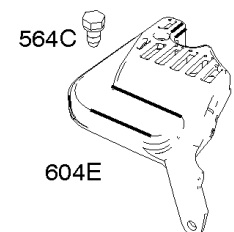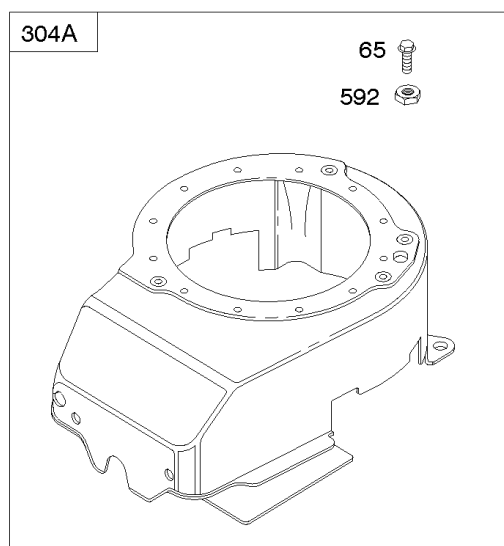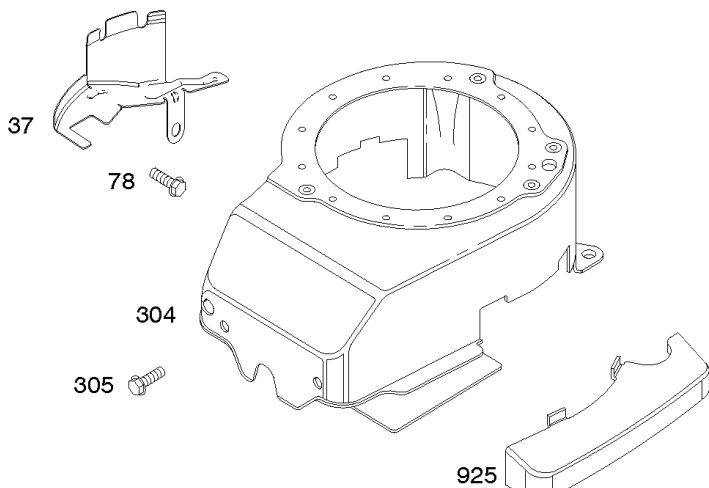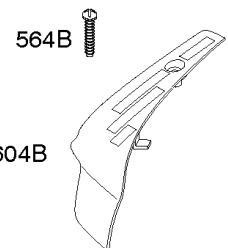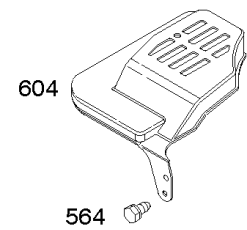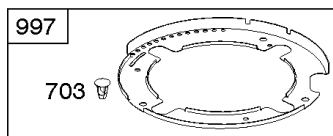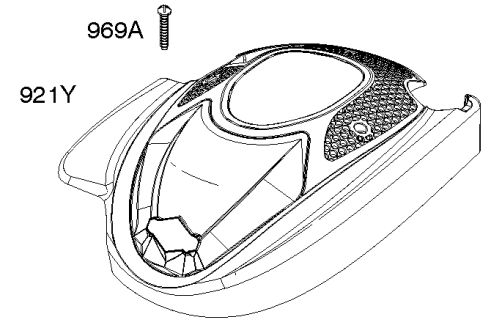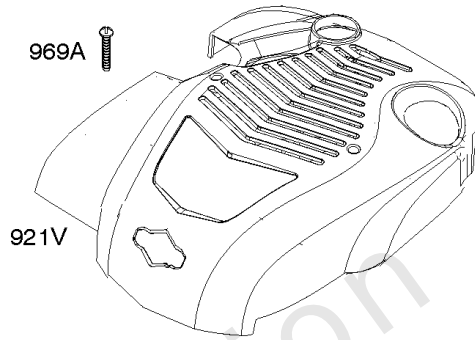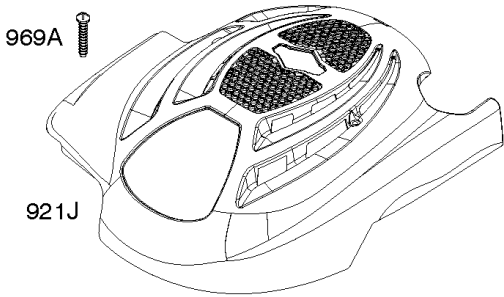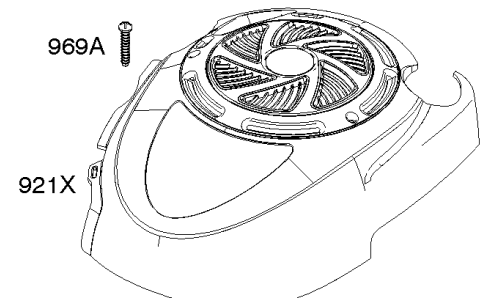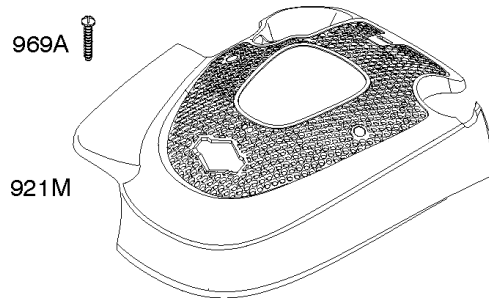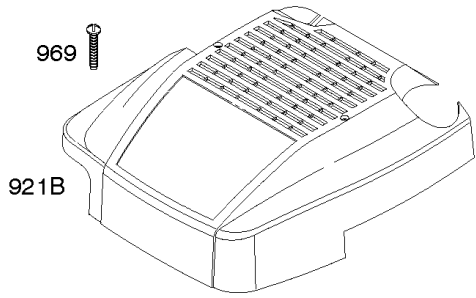

Blower Housing/Shrouds


REF NO	PART NO	QTY	DESCRIPTION
37	793756		GUARD, Flywheel
65	690837		SCREW -(Rewind Starter)
78	691108		SCREW -(Flywheel Guard)
304	493294		HOUSING, Blower -(Non Compliance Engines)
305	691108		SCREW -(Blower Housing)
563	691138		SCREW -(Debris Screen Guard)
564	690664		SCREW -(Control Cover)
564B	698589		SCREW -(Control Cover)
564C	690351		SCREW -(Control Cover)
592	690800		NUT -(Rewind Starter)
604	691757		COVER, Control
604B	790703		COVER, Control
604E	794794		COVER, Control
703	696309		CLIP
921B	692931		HOUSING, Blower
921Y	798277		HOUSING, Blower
921J	790036		HOUSING, Blower
921M	792652		HOUSING, Blower
921V	795089		HOUSING, Blower
921X	796706		HOUSING, Blower
925	795403		COVER, Linkage
930	691919		GUARD, Rewind -(Round)
949	696306		GUARD, Debris Screen
969	690700		SCREW -(Blower Housing)
969A	691138		SCREW -(Blower Housing)
997	696310		SHIELD, Debris
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

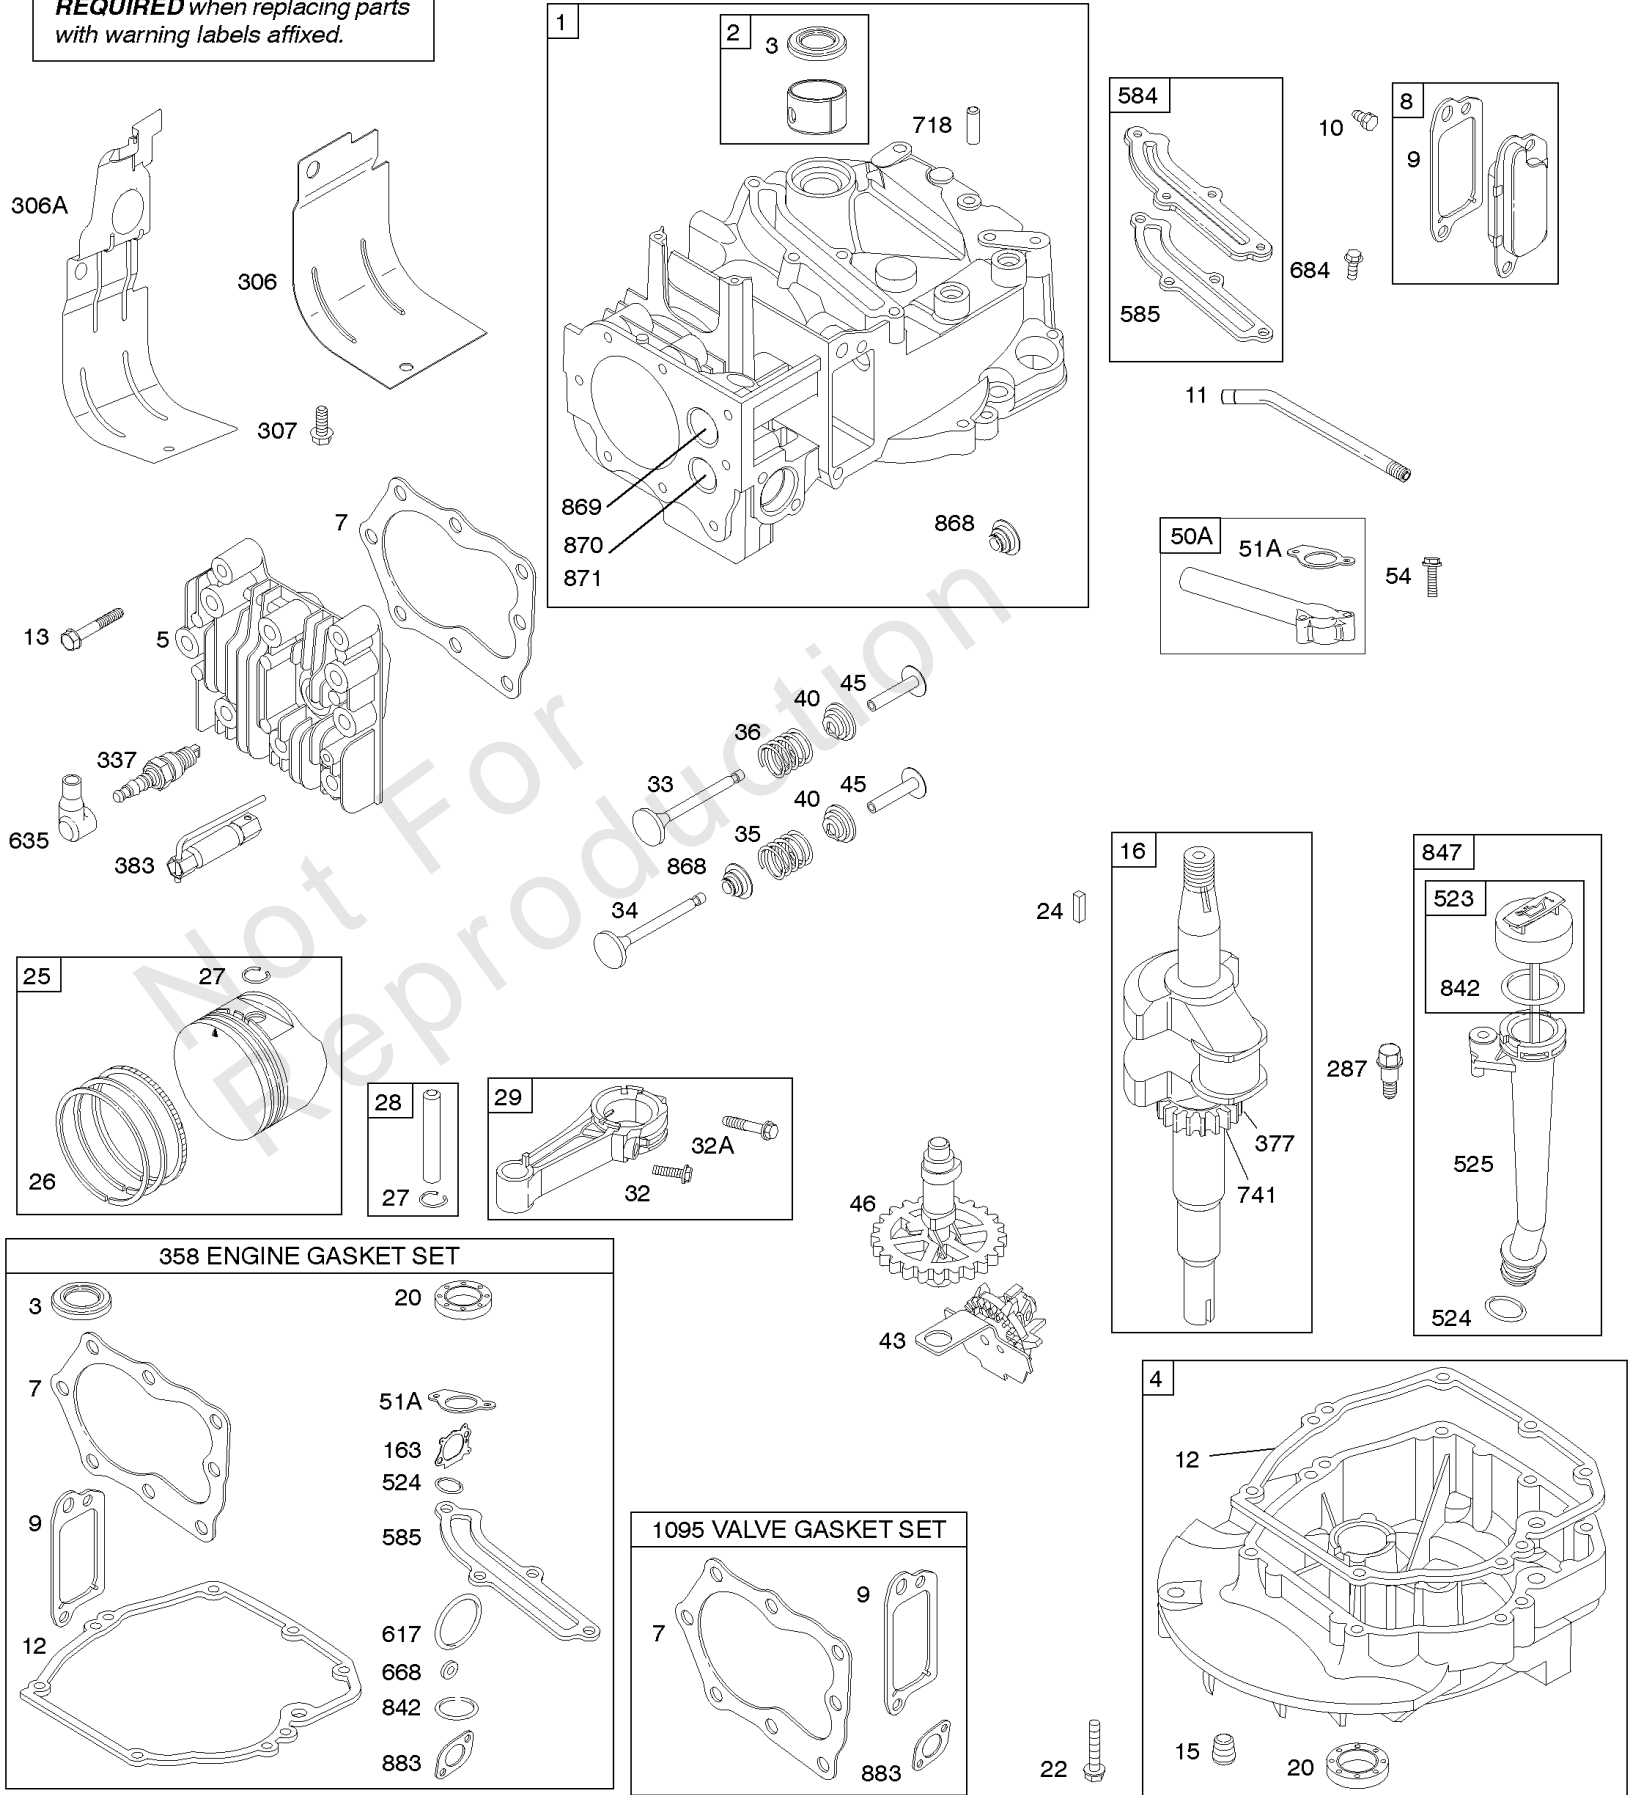

358 ENGINE GASKET SET

3, 7, 9, 12, 20, 51A, 163, 524, 585, 617, 668, 842, 883

1095 VALVE GASKET SET

7, 9, 883

Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group, Valves


REF NO	PART NO	QTY	DESCRIPTION
1	592890		CYLINDER ASSEMBLY
2	796961		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
4	493279		SUMP, Engine
5	691160		HEAD, Cylinder -Used Before Code Date 11070100
5	590411		HEAD, Cylinder -Used After Code Date 11063000
7	692249		GASKET, Cylinder Head -Used Before Code Date 11070100
7	799875		GASKET, Cylinder Head -Used After Code Date 11063000
8	590395		BREATHER ASSEMBLY
9	699833		GASKET, Breather
10	691125		SCREW -(Breather Assembly)
11	691781		TUBE, Breather
12	692232		GASKET, Crankcase
13	690912		SCREW -(Cylinder Head) -Used Before Code Date 11070100
13	590422		SCREW -(Cylinder Head) -Used After Code Date 11063000
15	691680		PLUG, Oil Drain -(Square Socket)
16	797681		CRANKSHAFT
20	399781S		SEAL, Oil -(PTO Side)
22	691092		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	797303		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 09041600 -Used Before Code Date 11070100
25	799064		PISTON ASSEMBLY -(.020 Oversize) -Used Before Code Date 09041700
25	590404		PISTON ASSEMBLY -(Standard) -Used After Code Date 07090300
25	590405		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 11063000
25	795429		PISTON ASSEMBLY -(Standard) -Used Before Code Date 07090400
26	791324		SET, Ring -(.020 Oversize) -Used Before Code Date 07090400
26	795431		SET, Ring -(Standard) -Used After Code Date 07090300 -Used Before Code Date 09041700
26	795432		SET, Ring -(.020 Oversize) -Used After Code Date 07090300 -Used Before Code Date 09041700

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

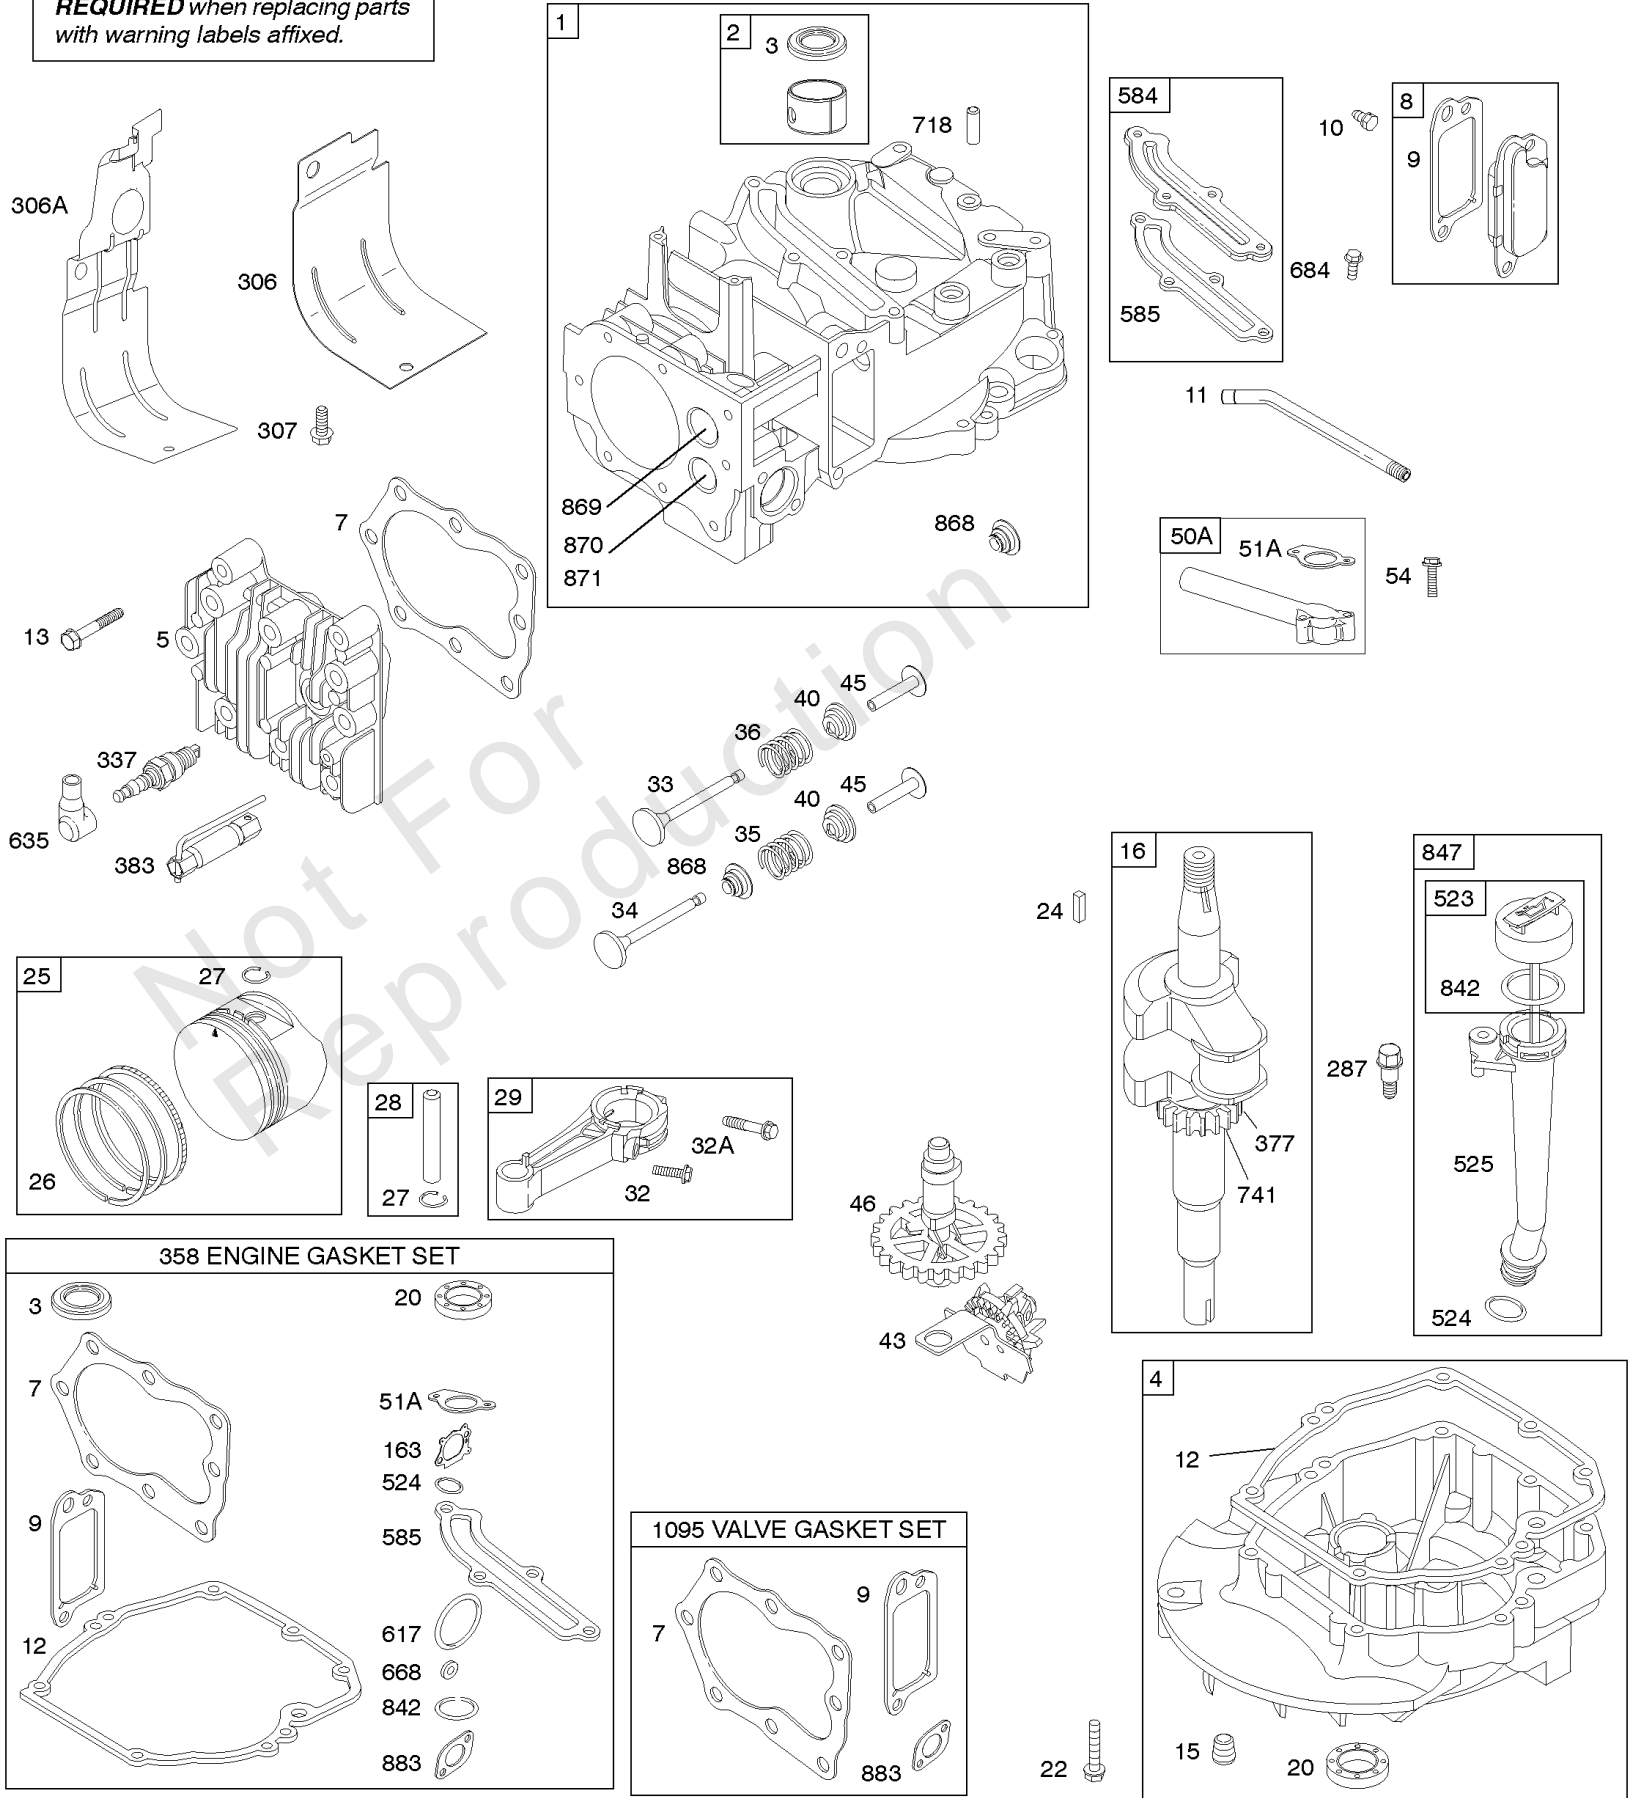

Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group, Valves


REF NO	PART NO	QTY	DESCRIPTION
26	797304		SET, Ring -(Standard) -Used After Code Date 09041600 -Used Before Code Date 11070100
26	797305		SET, Ring -(.020 Oversize) -Used After Code Date 09041600 -Used Before Code Date 11070100
26	590402		SET, Ring -(Standard) -Used After Code Date 11063000
26	590403		SET, Ring -(.020 Oversize) -Used After Code Date 11063000
26	791098		SET, Ring -(Standard) -Used Before Code Date 07090400
27	691866		LOCK, Piston Pin -Used Before Code Date 09041700
27	691588		LOCK, Piston Pin -Used After Code Date 09041600
28	499423		PIN, Piston -(Standard) -Used Before Code Date 09041700
28	298909		PIN, Piston -(Standard) -Used After Code Date 09041600
29	797306		ROD, Connecting -(Standard) -Used After Code Date 09041600
29	499424		ROD, Connecting -(Standard) -Used Before Code Date 09041700
32	691664		SCREW -(Connecting Rod)
32A	695759		SCREW -(Connecting Rod)
33	590394		VALVE, Exhaust
34	590393		VALVE, Intake
35	691270		SPRING, Valve -(Intake)
36	691270		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
43	691997		SLINGER, Governor/Oil
45	690548		TAPPET, Valve
46	691449		CAMSHAFT
50A	794305		MANIFOLD, Intake
51A	794306		GASKET, Intake
54	691650		SCREW -(Intake Manifold)
163	795629		GASKET, Air Cleaner -(Air Cleaner)
287	690940		SCREW -(Dipstick Tube)
306	690450		SHIELD, Cylinder
306A	790836		SHIELD, Cylinder
307	690345		SCREW -(Cylinder Shield)
337	796112S		PLUG, Spark -(Resistor)

1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.






1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

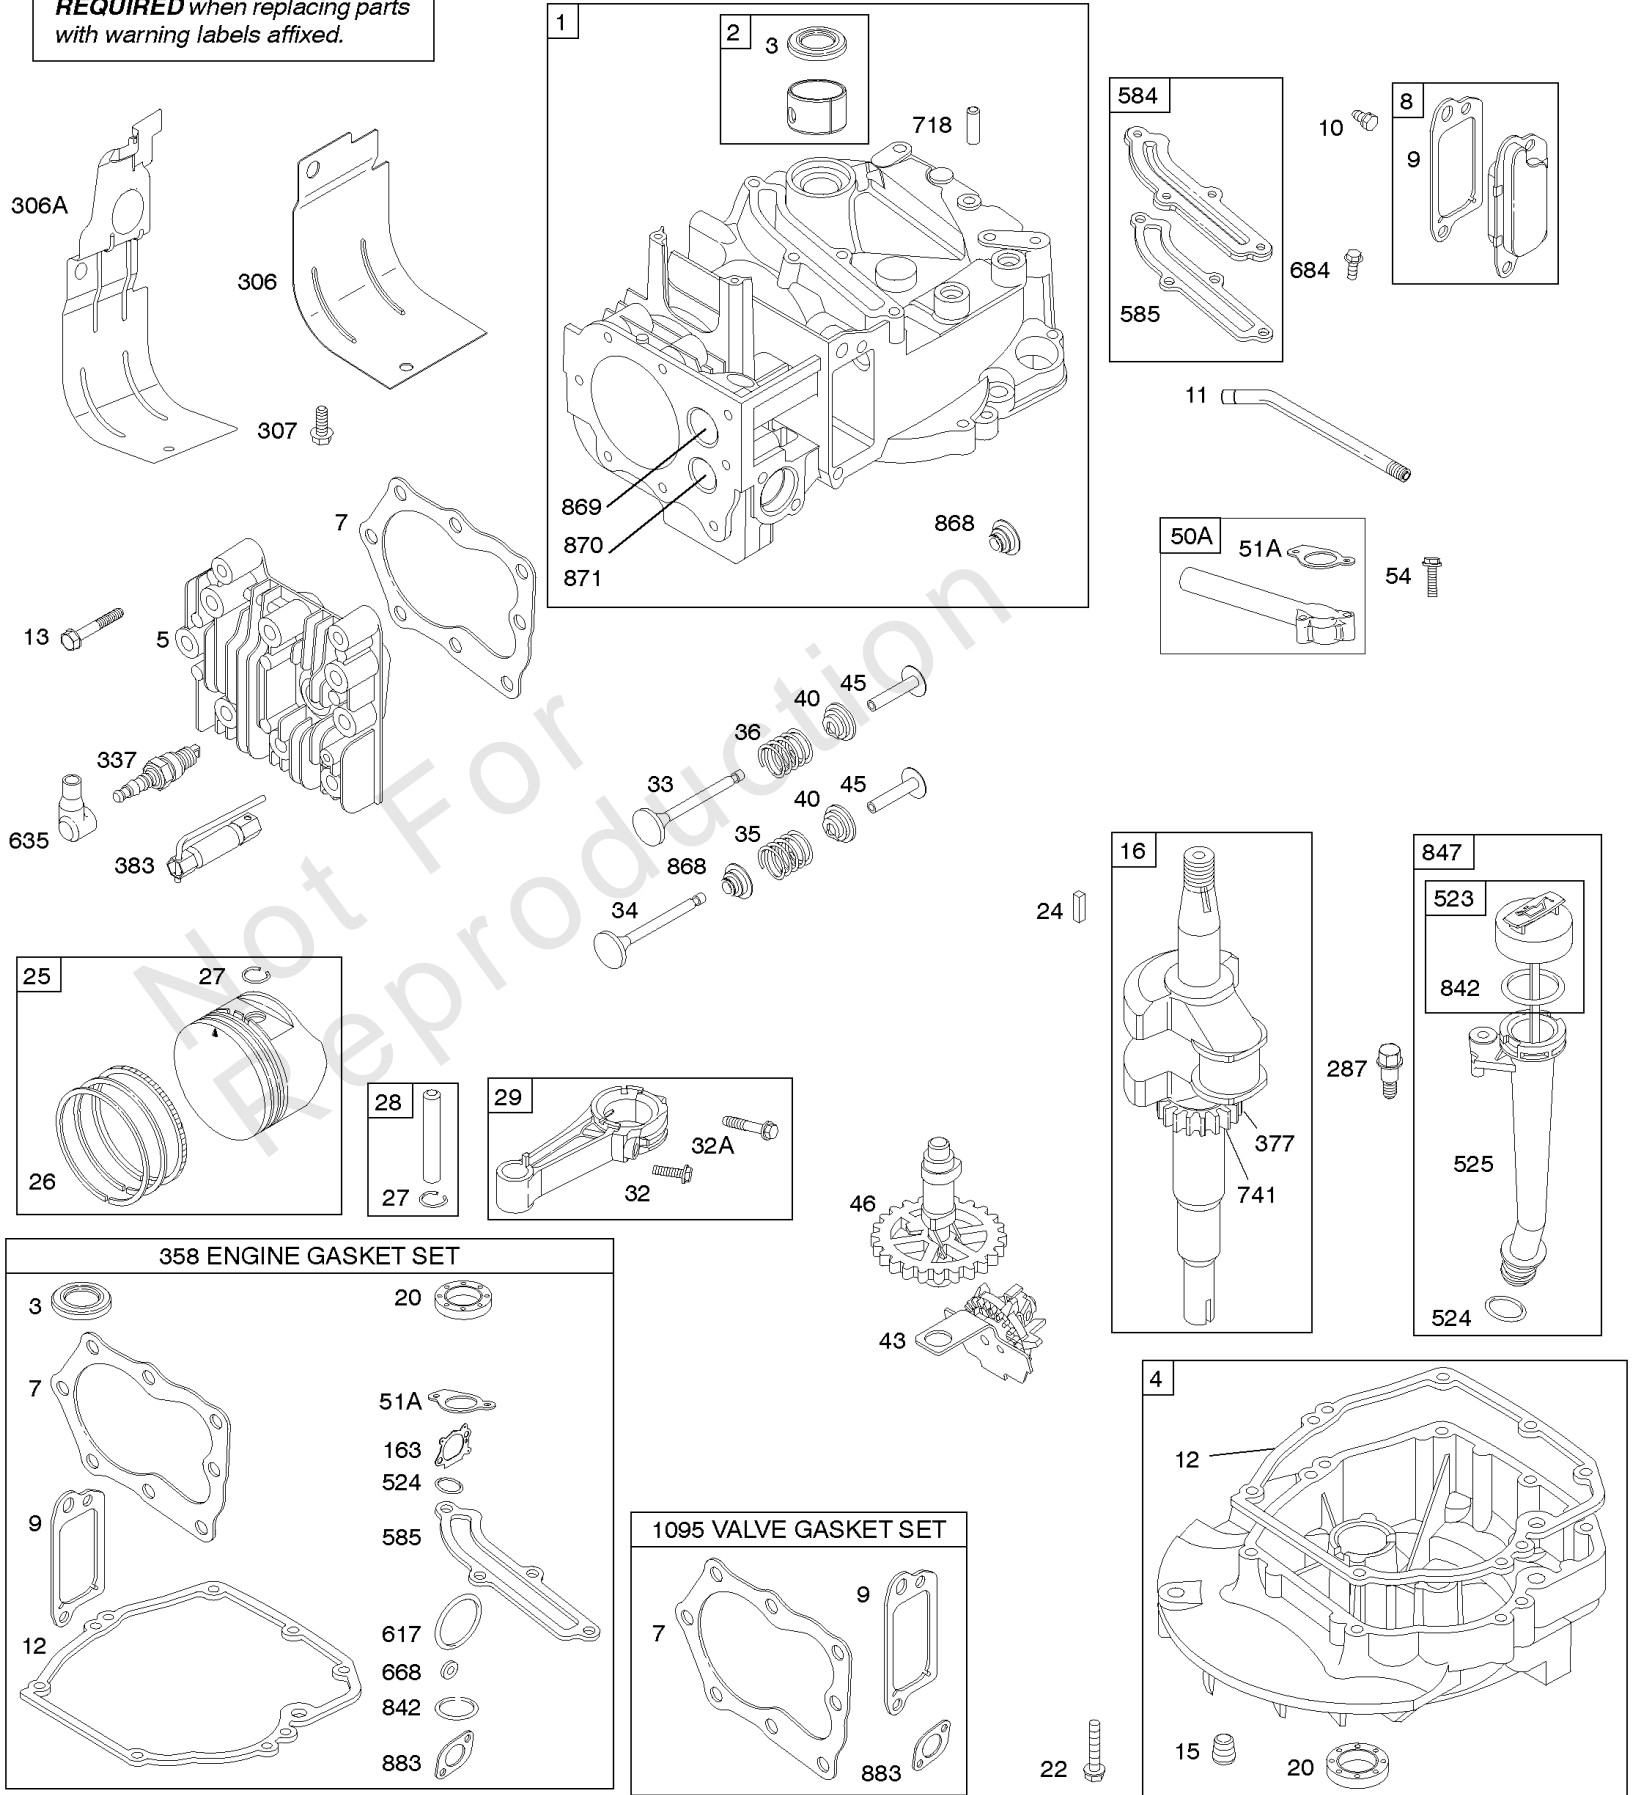






Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group, Valves

REF NO	PART NO	QTY	DESCRIPTION
337	697451		PLUG, Spark -(EMS)
358	590508		GASKET SET, Engine
377	690979		KEY, Woodruff
383	89838S		WRENCH, Spark Plug
523	499621		DIPSTICK
524	692296		SEAL, O-Ring -(Dipstick Tube)
525	495265		TUBE, Dipstick
584	697734		COVER, Breather Passage
585	691879		GASKET, Breather Passage
617	270344S		SEAL, O-Ring -(Intake Manifold)
635	66538S		BOOT, Spark Plug
668	493823		SPACER -(Includes 2)
684	690345		SCREW -(Breather Passage Cover)
718	690959		PIN, Locating
741	794388		GEAR, Timing -(Use Without Woodruff Key) -Used After Code Date 07093000 -Used Before Code Date 08021800
741	797521		GEAR, Timing -(Metal) -Used After Code Date 08021700
741	691830		GEAR, Timing -(Uses Woodruff Key)
741	790345		GEAR, Timing -(Use Without Woodruff Key) -Used Before Code Date 07100100
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	692047		DIPSTICK/TUBE ASSEMBLY
868	697338		SEAL, Valve -Used Before Code Date 11070100
868	590410		SEAL, Valve -Used After Code Date 11063000
869	691155		SEAT, Valve -(Intake)
870	690380		SEAT, Valve -(Exhaust)
871	262001		BUSHING, Valve Guide -(Exhaust) -Used Before Code Date 11070100
871	63709		BUSHING, Valve Guide -(Intake) -Used Before Code Date 11070100
871	590409		BUSHING, Valve Guide -(Intake and Exhaust) -Used After Code Date 11063000
883	691881		GASKET, Exhaust
1058	380567TRI		MANUAL, Operator's
1095	590507		GASKET SET, Valve
1319	794467		LABEL, Warning
1330	270962		MANUAL, Repair

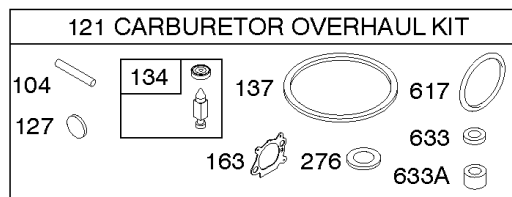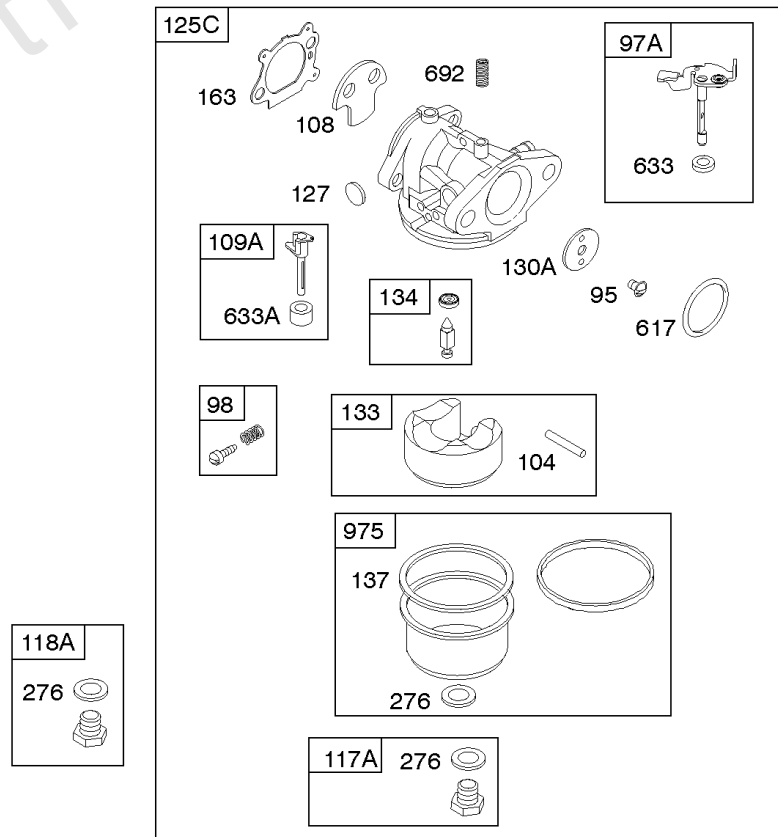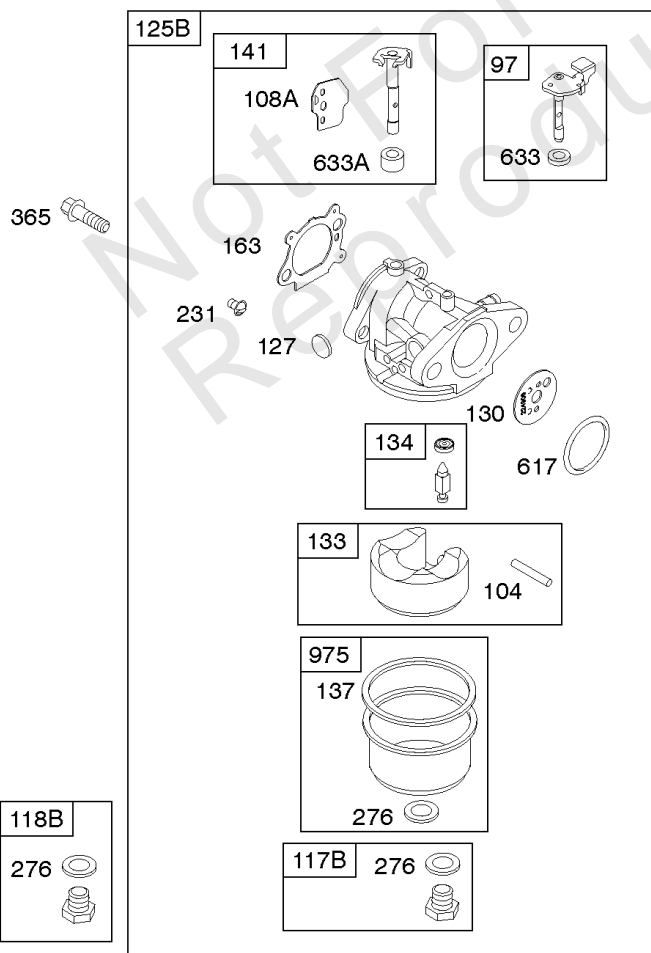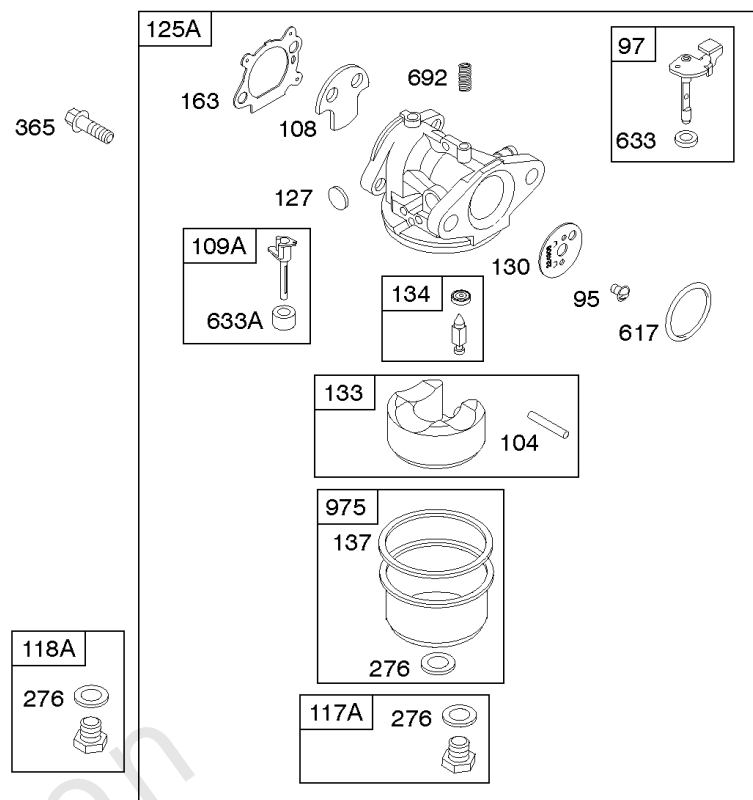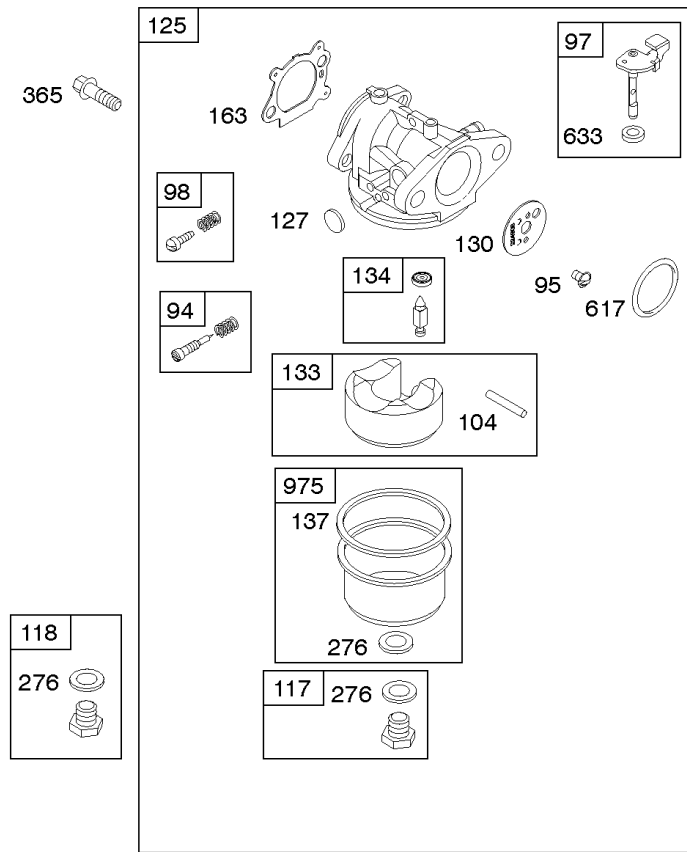

Carburetor


REF NO	PART NO	QTY	DESCRIPTION
94	493765		KIT, Idle Mixture -(Used On Carb. I.d. No. M24)
95	691636		SCREW -(Throttle Valve)
97	493267		KIT, Throttle Shaft -(Metal)
97	696565		SHAFT, Throttle -(Plastic)
97A	795881		SHAFT, Throttle -(Plastic)
98	398185		KIT, Idle Speed -(Idle Speed) (Lmt 26, 27, 28, 31)
104	797622		PIN, Float Hinge
108	796993		VALVE, Choke -Used After Code Date 12072700
108	691182		VALVE, Choke -Used Before Code Date 12072600
108A	795935		VALVE, Choke -Used After Code Date 08031200
108A	790844		VALVE, Choke -Used Before Code Date 08031300
109A	498593		SHAFT, Choke
117	494870		JET, Main -(Standard)
117A	697355		JET, Main -(Standard)
117A	498981		JET, Main -(Standard)
117B	498977		JET, Main -(Standard) -Used After Code Date 08061900
117B	691428		JET, Main -(Standard) -Used Before Code Date 08062000
118	498975		JET, Main -(High Altitude)
118A	494870		JET, Main -(High Altitude)
118A	692677		JET, Main -(High Altitude)
118B	694250		JET, Main -(High Altitude) -Used After Code Date 08061900
118B	695042		JET, Main -(High Altitude) -Used Before Code Date 08062000
121	498260		KIT, Carburetor Overhaul
125	799868		CARBURETOR -(Primer)
125A	799869		CARBURETOR -(Choke)
125B	799866		CARBURETOR -(Autochoke System)
127	694468		PLUG, Welch -(Bowl Vent)
130	696564		VALVE, Throttle
130A	691181		VALVE, Throttle
133	398187		FLOAT, Carburetor
134	398188		KIT, Needle/Seat

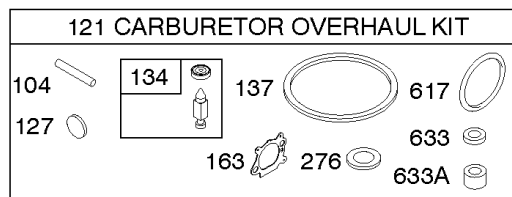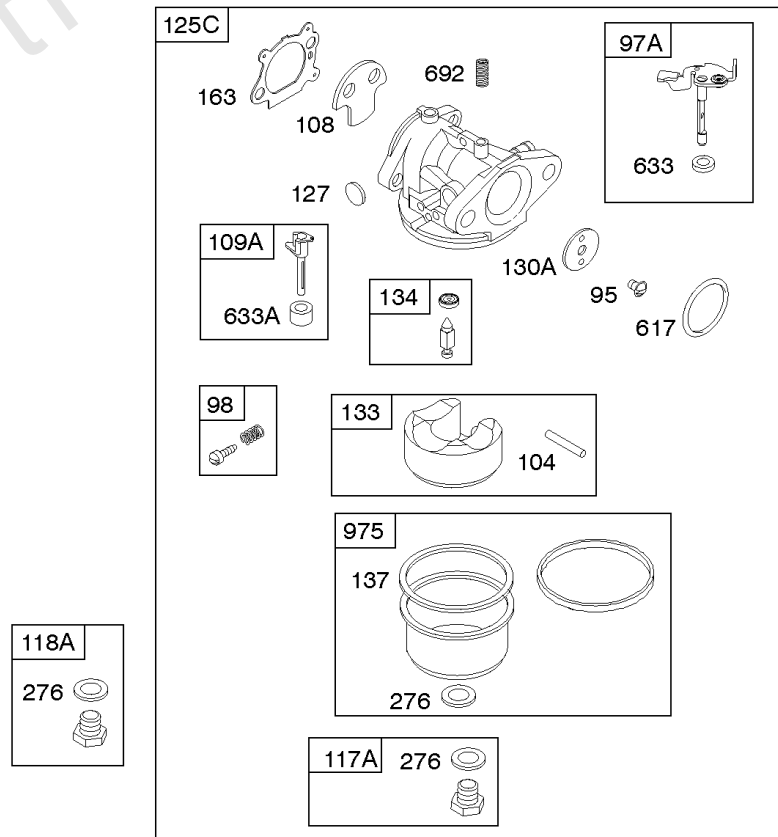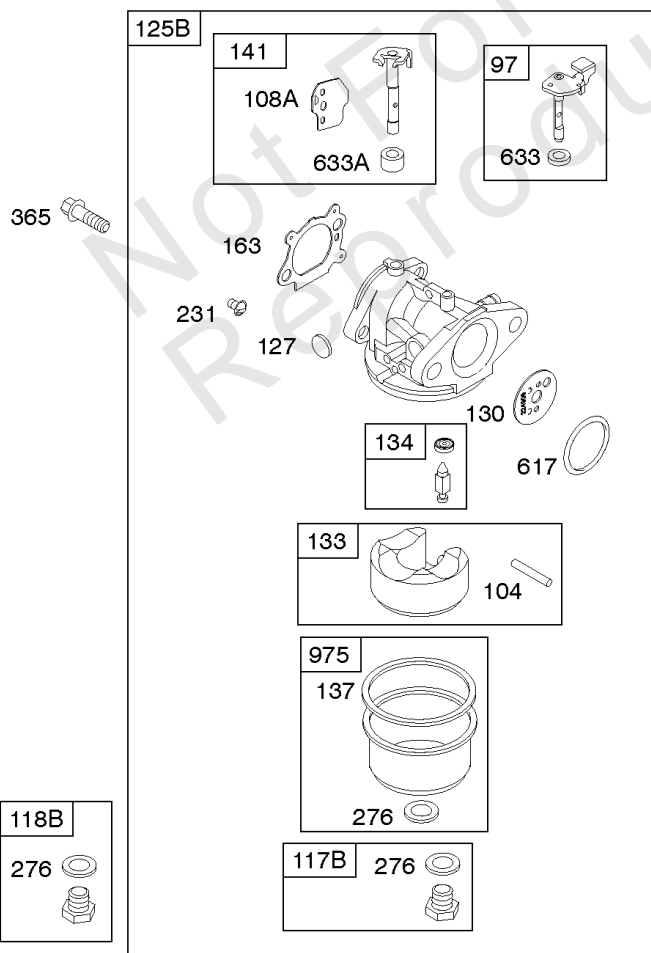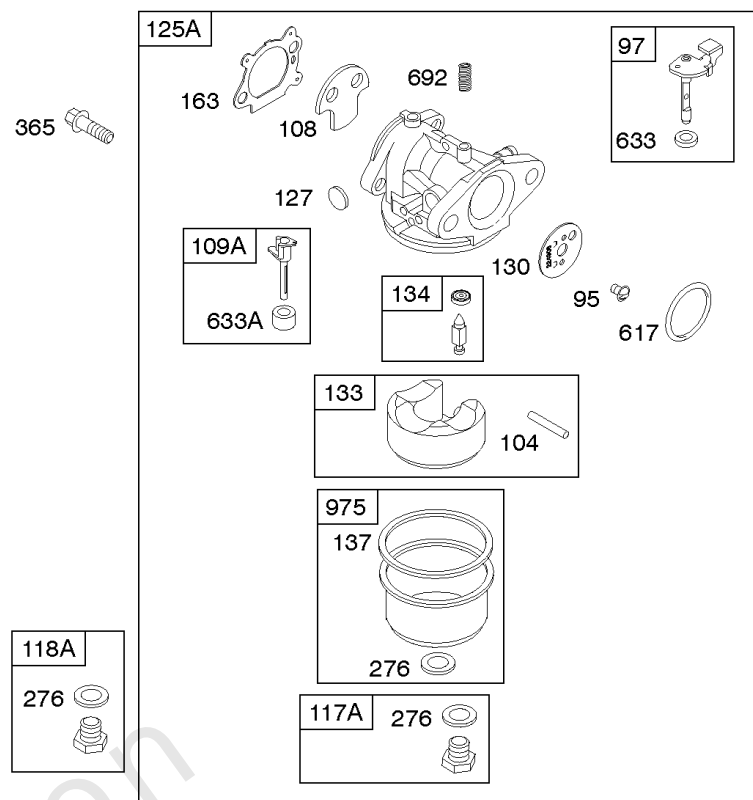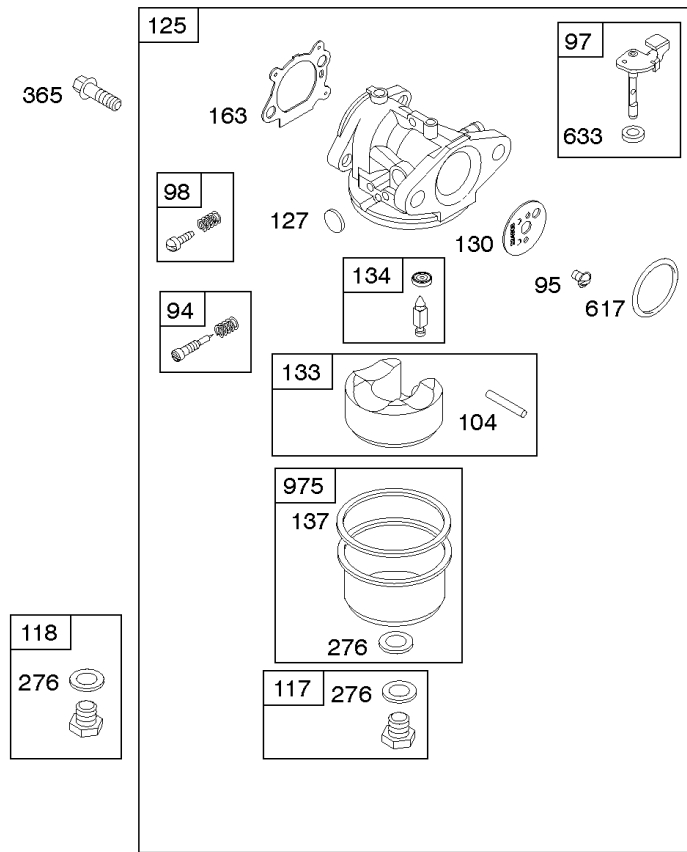

Carburetor

REF NO	PART NO	QTY	DESCRIPTION
137	693981		GASKET, Float Bowl -(1/16)
137	796610		GASKET, Float Bowl
141	796193		KIT, Choke Shaft
163	795629		GASKET, Air Cleaner -(Air Cleaner)
231	691636		SCREW -(Choke Valve)
276	271716		WASHER, Sealing
365	691688		SCREW -(Carburetor)
617	270344S		SEAL, O-Ring -(Intake Manifold)
633	691321		SEAL, Choke/Throttle Shaft -(Throttle Shaft)
633A	693867		SEAL, Choke/Throttle Shaft
692	690572		SPRING, Detent
975	796611		BOWL, Float

Not For Reproduction

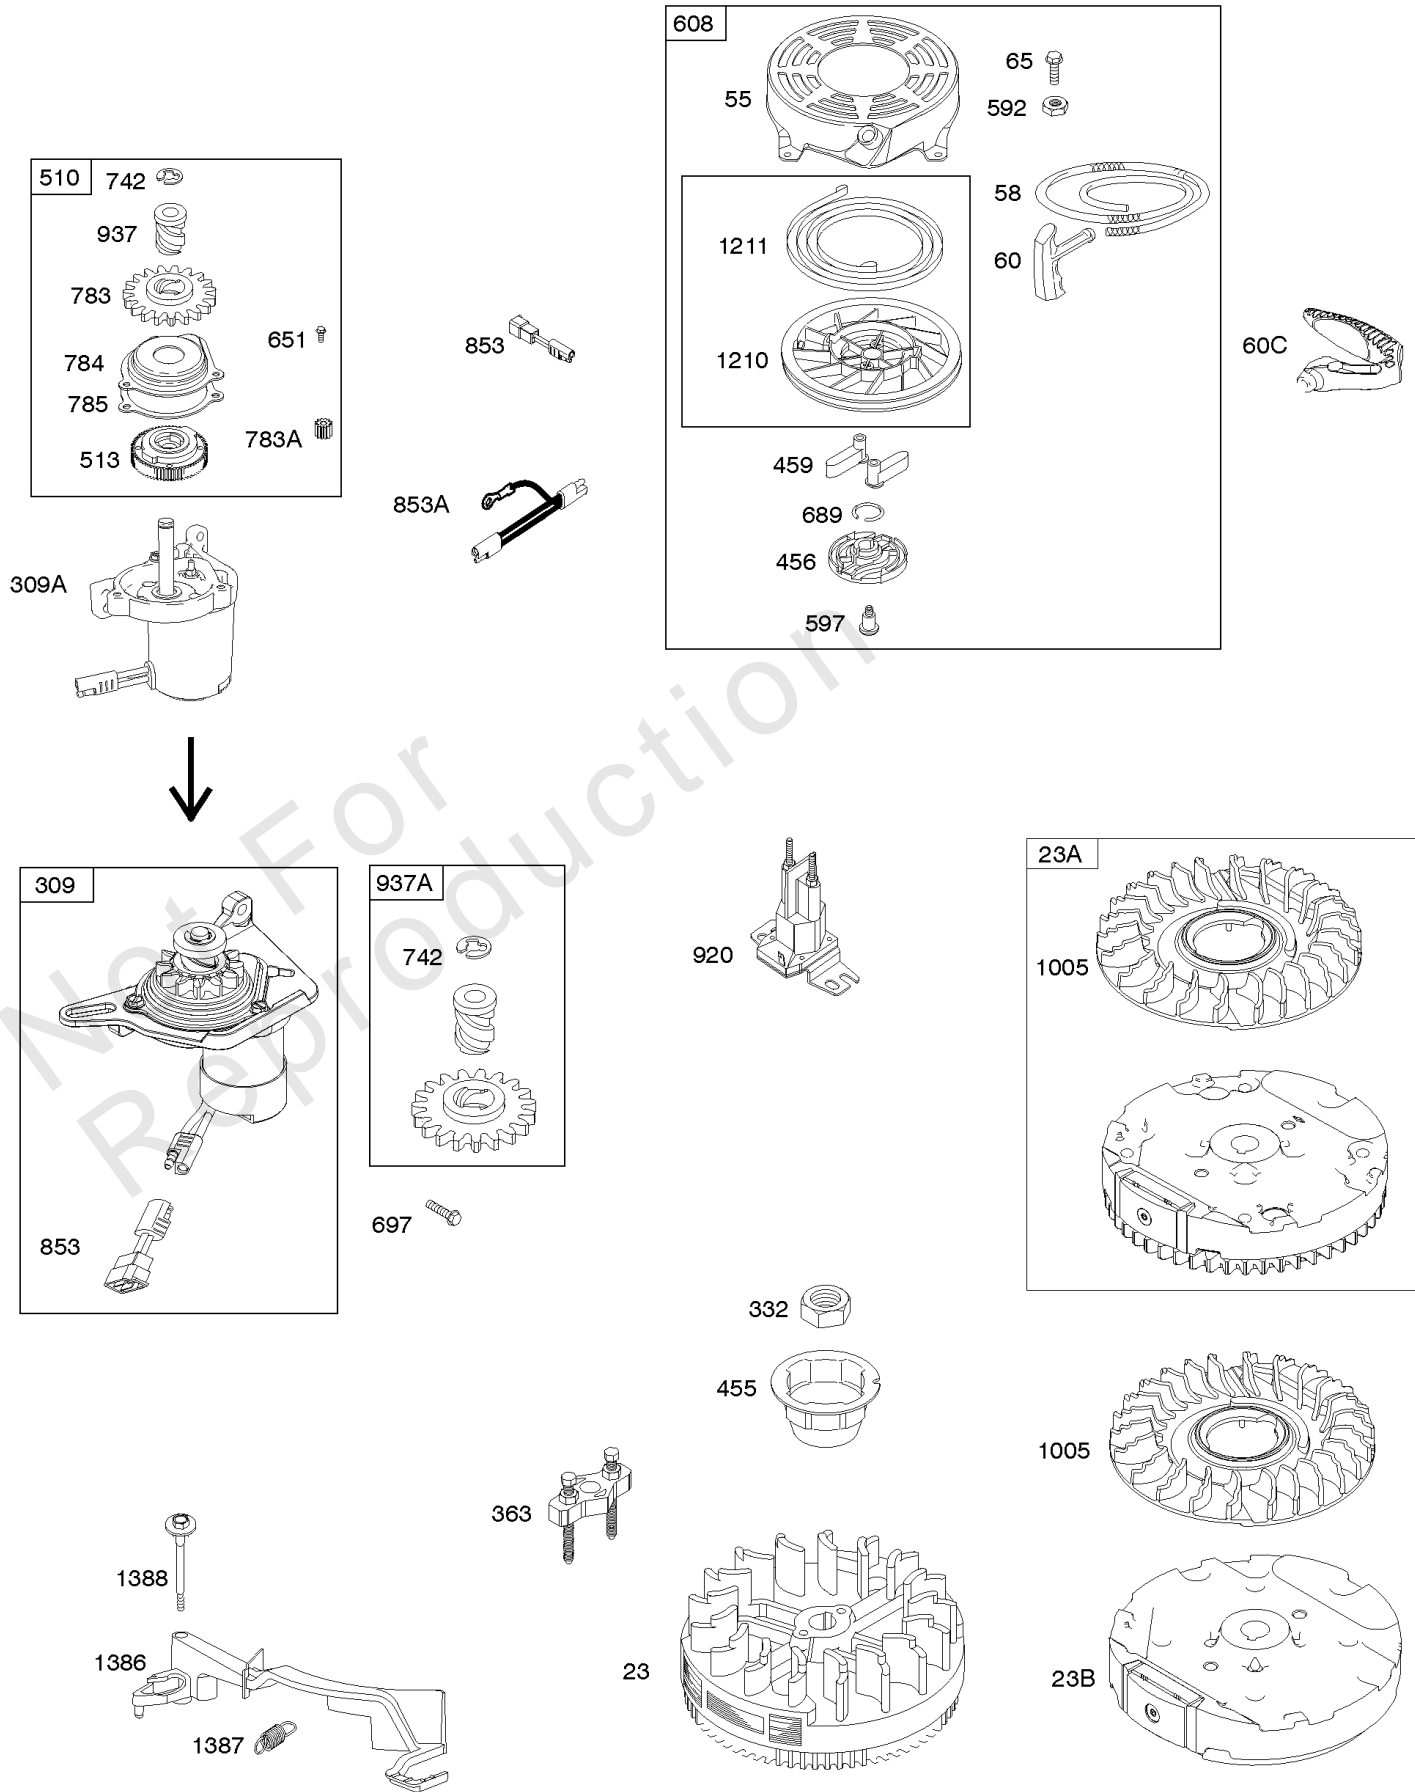

Electric Starter, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23B	790536		FLYWHEEL
55	691421		HOUSING, Rewind Starter
58	697316		ROPE, Starter -(Cut To Required Length)
60	281434S		GRIP, Starter Rope
60C	799716		GRIP, Starter Rope
65	690837		SCREW -(Rewind Starter)
309	799045		MOTOR, Starter
309A	-----		Motor-Starter -(For Replacement Starter Motor, Order Reference 309)
332	690662		NUT -(Flywheel)
363	19069		PULLER, Flywheel
455	791960		CUP, Flywheel
456	692299		PLATE, Pawl Friction
459	281505S		PAWL, Ratchet
510	795093		DRIVE, Starter
513	795100		CLUTCH, Drive
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	497680		STARTER, Rewind
651	691660		SCREW -(Starter Gear Cover)
689	691855		SPRING, Friction
697	691127		SCREW -(Starter Motor) (Drive Cap)
742	93941		RETAINER, E Ring
783	795099		GEAR, Pinion
783A	795096		GEAR, Pinion
784	795095		COVER, Starter Gear
785	692352		GASKET, Starter Cover
853	695268		ADAPTER, Wire
853A	695897		ADAPTER, Wire
920	691656		SOLENOID, Starter
937	795098		SPLINE, Starter
937A	799420		SPLINE, Starter
1005	691346		FAN, Flywheel
1210	498144		PULLEY/SPRING ASSEMBLY -(Pulley)
1211	498144		PULLEY/SPRING ASSEMBLY -(Spring)
1386	790848		VANE, Air
1387	790849		SPRING, Air Vane
1388	790850		SCREW -(Air Vane) (Auto Choke System)

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	126L021005	1	Replacement Engine
	792740	1	Replacement Short Block
	298090	1	FILTER, Fuel -Add Part
-----			Top No-Load Speed: 3500 -Trim: ALL
-----			Service Note: Transfer Ground Wire Terminal and/or Stop Switch and Wire to replacement engine.
-----			Service Note: Transfer Rewind Assembly from original engine to replacement engine.

Not For Reproduction

